BP6013G1 Tech Sheet

Customer:	Balboa Water Group
Part Number:	56610-05 800 Incoloy 3kW 56611-05 825 Incoloy 3kW 56612-05 Titanium 3kW 56731-04 800 Incoloy 2kW 56986 825 Incoloy 2kW 56941 Titanium 2kW
Custom Box Overlay	
Box Overlay Part Number	N/A
CE System Model For 3.0kW: CE System Model For 2.0kW:	
Software Version ID:	M100_226 V37.0
Software Version:	37.0
File Name:	BP6013_37.0_BP6013G1.hex
Configuration Signature:	1B456746
Eng. Project Number:	4890
Control Panels:	
spaTouch™2	Any version (version 2.0 or later required for bba™2 fully integrated functionality)
Icon spaTouch™	Any version (version 3.36 or later required for bba™2 fully integrated functionality)
Menued spaTouch™	Any version (version 2.8 or later required for bba™2 integrated functionality)
TP800	Version 3.1 and later (Version 3.13 or later required for bba™; version 4.11 or later required for bba™2 integrated functionality)
TP600	Version 2.7 and later (Version 2.12 or later required for bba™/bba™2 On/Off control via menu)
TP400T CE	Version 2.7 and later (TP400T US should <u>not</u> be used) (Version 2.12 or later required for bba™/bba™2 On/Off control via menu)
TP400W CE	Version 2.7 and later (TP400W US should <u>not</u> be used) (Version 2.12 or later required for bba™/bba™2 On/Off control via menu)



System Revision History

Part #	EPN	Date	Originator	Changes Made
ZT000101	4305	05-06-14	BWG	Stripped-down version of BP2100 board, with the same Setups as in BP601G1, plus 3 additional Setups (with Circ pump plus 2-Speed Pump 1), but with multiple services supported. No remote support, no real-time clock, & no low speed relay for Pump 2.
56610 56611 56612	4305	07-08-14	BWG	Release to production.
56610-01 56611-01 56612-01	4354	08-07-14	BWG	Rename from BP1900G1 to BP6013G1.
56731	4466	02-18-15	Sales	Create 2.0kW Version.
56610-02 56611-02 56612-02 56731-01	4489	03-20-15	BWG	BWG update with plug and click heater.
56610-03 56611-03 56612-03 56731-02	4601	09-30-15	BWG	Update to latest software version, including faster return to heating after high-speed pumps turn OFF, in amperage-resricted situations.
56610-04 56611-04 56612-04 56731-03	4776	10-26-16	BWG	Updated to latest software version, adding topside-intergrated bba™2 support. Released to production.
56610-05 56611-05 56612-05 56731-04	4890	06-05-17	BWG	Updated to latest software version, adding bba™/bba™2 On/Off support to TP600/TP400 Menus. Released to production.
56986 56941	N/A	06-12-18	BWG	Add 2.0kW 825 Incoloy & Titanium system PNs.
1				

bba[™] & bba[™]2 (Balboa Bluetooth Amp) connection is documented seperately.

bba[™] is integrated into graphic display panels (TP800, TP900 and spaTouch[™]). With TP600/TP400, use the "BT" entry on the menu to toggle bba[™] power On/Off. bba[™]2 is integrated into graphic display panels (TP800, TP900 and spaTouch[™]). With TP600/TP400, use the "BT" entry on the menu to toggle bba[™]2 power On/Off.



Basic Functions Setup 1-9

Power Requirements:

Single Service [3 wires (line, neutral, ground)]
230VAC, 50/60Hz*, 1b, 16A/32A, (Circuit Breaker rating = 20A/40A max.)
Dual Service [5 wires (line 1, neutral 1, line 2, neutral 2, ground)]
230VAC, 50/60Hz, 2b, 16A, (Circuit Breaker rating = 20A max each phase line.)

3-Service [5 wires (line 1, line 2, line 3, neutral, ground)] 230VAC line-to-neutral**, 50/60Hz*, 3b, 16A, (Circuit Breaker rating = 20A max each phase line.)

* BP systems automatically detect 50Hz vs 60Hz.

** 3-phase service measured line-to-line will read about 400V, but BP systems do not use it line-to-line.

IMPORTANT - Service must include a neutral wire, with a line to neutral voltage of 230VAC.

Migrating from BP601G1:

If you are migrating from the BP601G1 model to this BP6013G1 model:

- The first 6 Setups are the same as the 6 Setups in the BP601G1.
- The remiaining 3 Setups are new Setups that allows a 2-Speed Pump1 to be used along with a Circ Pump (which is not possible on the BP601G1).

HiPot Testing Note:

Disconnect slip terminal with green wires from J11 prior to performing HiPot test. Failure to disconnect may cause a false failure of the test. Reconnect terminal to J11 after successful completion of HiPot test.



Basic Functions Setup 1-9


System Ouputs:

Pump 1	230VAC		6.5A - 12A n etups in Setu	
		in Setups 1,	•	on service available (16A vs. 32A), other equipment installed, and if A5 is set to ON for Special Amperage Rule B. the heater pump. ugh heater
Pump 2	230VAC		•	nax 15-minute timer on service available (16A vs. 32A), other equipment installed, and if A5 is set to ON for Special Amperage Rule B.
Blower	230VAC	1-Speed Used in Setu	4A max 1p 3, 4 & 8	15-minute timer
Circ Pump	230VAC		2A max eater pump i 20 GPM thro	Programmable Filtration Cycles + Polling n Setups 2, 4, 6 - 9. ugh heater
Ozone	230VAC		.5A max	Slaved to Circ Pump in Circ Setups 2, 4, 6 - 9. Independent in Non-Circ Setups 1, 3 & 5.
Spa Light	10VAC	0n/0ff	1A max	240-minute timer.
A/V (Stereo)	230VAC	Hot	4A max	Always on
Heater	3.0kW @ 24 2.0kW @ 24			



Hardware Setup


Wiring Diagram

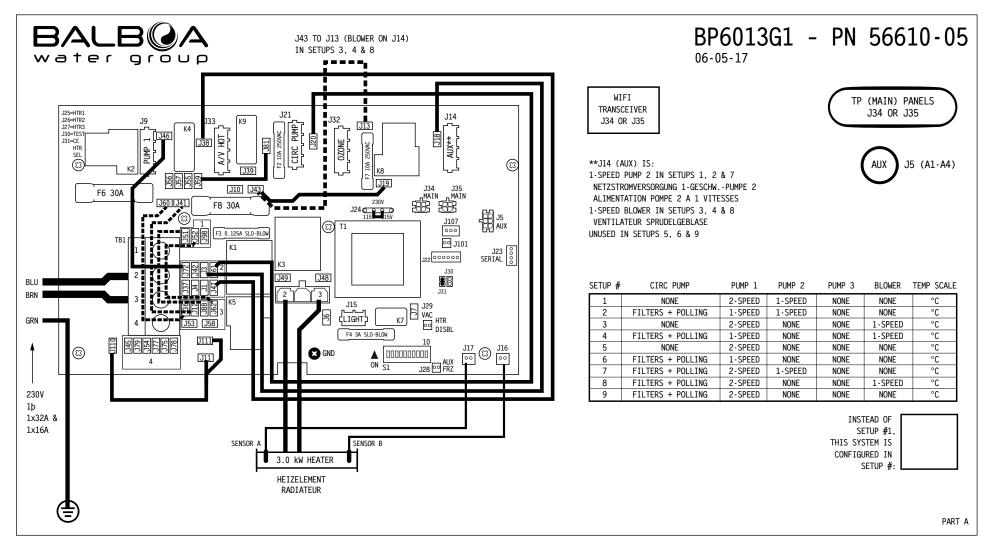



Hardware Setup

Settings

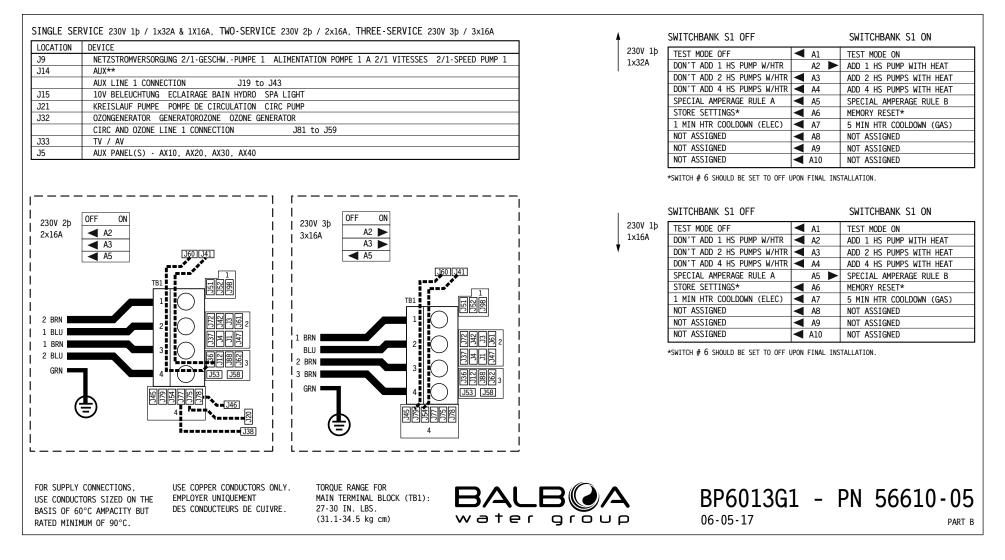



Setup Reference Table

Setup #	Circ Pump	Pump 1	Pump 2	Pump 3	Blower	Temp Scale
1	None	2-Speed	1-Speed	None	None	°C
2	Programmable Filtration + Polling	1-Speed	1-Speed	None	None	°C
3	None	2-Speed	None	None	1-Speed	°C
4	Programmable Filtration + Polling	1-Speed	None	None	1-Speed	°C
5	None	2-Speed	None	None	None	°C
6	Programmable Filtration + Polling	1-Speed	None	None	None	°C
7	Programmable Filtration + Polling	2-Speed	1-Speed	None	None	°C
8	Programmable Filtration + Polling	2-Speed	None	None	1-Speed	°C
9	Programmable Filtration + Polling	2-Speed	None	None	None	°C

System (and any replacement board) is shipped in Setup 1




Changing Software Setups with spaTouch™ Icon-Driven Panels

Test Menu Access (S1, Switch 1 ON) Service Technician ONLY.DANGER! HIGH VOLTAGE WILL BE ACCESSIBLE! SERVICE TECHNICIAN ONLY!1While the system is running, move DIP Switch 1 (on S1 on the Main circuit board) to ON.1The system will enter Test Mode.10Moving DIP Switch 1 to OFF will exit Test Mode.10

To Change Software Setups:

While in Test Mode, press the indicated icons to move from screen to screen.

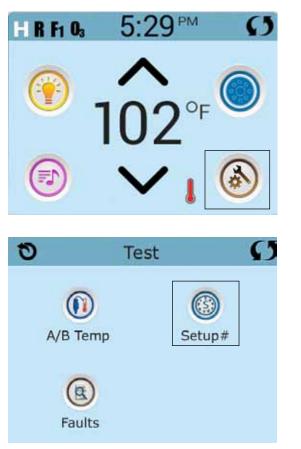



Once on the Setup Selection screen, press the Up or Down icon to select the desired Setup Number, then press the Check Mark icon to confirm and to have the spa restart.


ON 🕨

S1

S1

ON


After the system restarts, you may see a message that "The settings have been reset"; this is normal after changing Setups with DIP Switch 6 in the OFF position. Press "Clear" to dismiss this message. The example screens shown here are from the spaTouch 1 Icon-Driven Panel, but the screens on the spaTouch 2 Panel are similar. The main difference is that the spaTouch 2 display is wider.

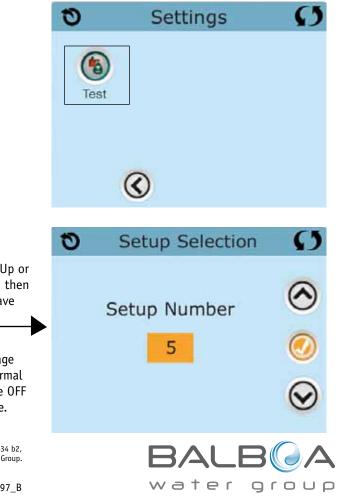

Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending.

8 56610-05_56611-05_56612-05_56731-04_56941_56986_97_B

Changing Software Setups with TP800 / TP900 / spaTouch™ Menued Panel

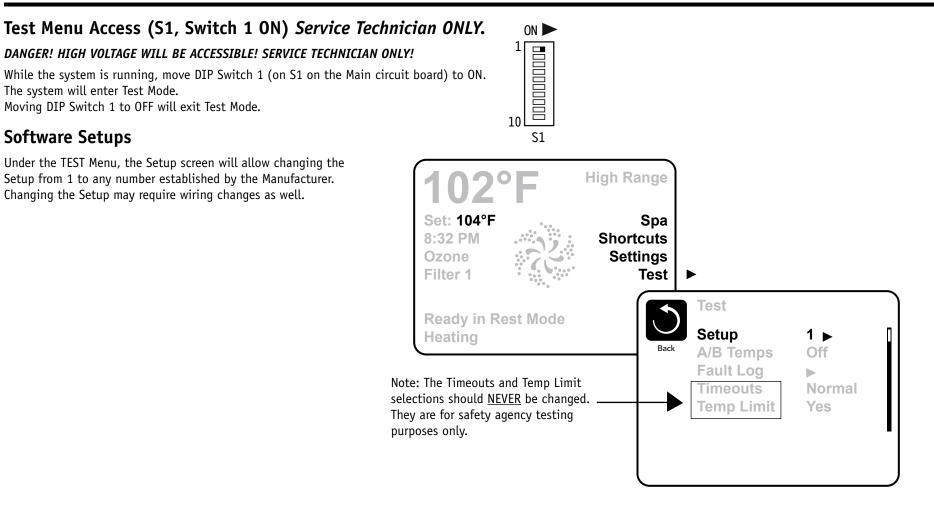



Changing Software Setups with TP600 / TP400

Test Menu Access (S1, Switch 1 ON) Service Technician ONLY.

DANGER! HIGH VOLTAGE WILL BE ACCESSIBLE! SERVICE TECHNICIAN ONLY!

While the system is running, move DIP Switch 1 (on S1 on the Main circuit board) to ON. The system will enter Test Mode. Moving DIP Switch 1 to OFF will exit Test Mode.

Software Setups

Under the TEST Menu, the Setup screen will allow changing the Setup from 1 to any number established by the Manufacturer. Changing the Setup may require wiring changes as well.

You will have 1 minute to complete the setup change after you manually exit Priming Mode. (Once familiar with the process, the Setup change should take less than 15 seconds.)




When the panel displays RUN PMPS PURG AIR, press any Temperature button ONCE to exit Priming Mode. You should see "---T" where the T indicates the system is in Test Mode.



Continued on Next Page.



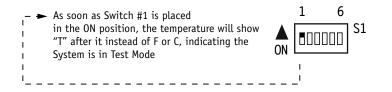

Changing Software Setups with TP600 / TP400 Continued


Again, You will have 1 minute to complete the setup change after you manually exit Priming Mode.

Immediately after exiting Priming Mode, press this sequence of buttons: Warm*, Light, Warm, Warm, Warm. Continue to press Warm until the diplay shows the Setup Number (S-01, S-02, etc.) you want to switch to. When the correct setup number is showing, press Light once, and the system will reset, using the newly-selected Setup from that point on.

Move DIP Switch 1 to the OFF position to take the spa out of Test Mode. °F or °C will replace °T.

Using a permanent marker, write the Setup number on the Setup label mounted inside the system lid (right). This is very important to any service person in the future who may need to replace a circuit board or system and needs to change the Setup on a replacement part while in the field.

NOTE: Changing the Setup may require wiring changes as well - refer to the wiring diagram or wiring diagram addendum.

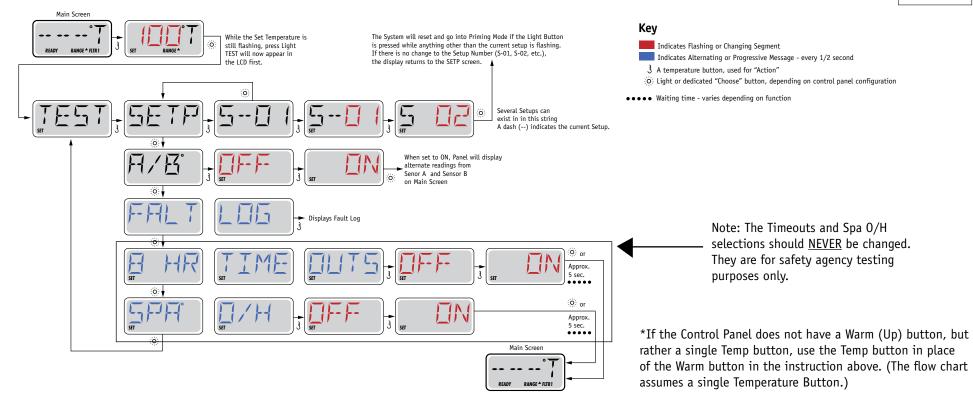

Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending.



THIS SYSTEM IS

CONFIGURED AS SETUP #


Equipment Expansion

Expansion Features Control Connection

Relay 1 (J101)

Relay 7/8 (J107)


Default Undefined Undefined **Fuse** None None

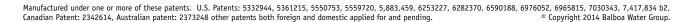



DIP Switch Functions

Fixed-fuction DIP Switches

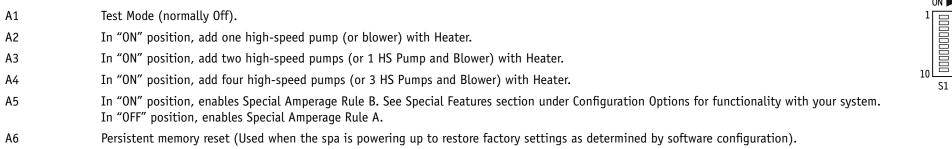

A2, A3, and A4 work in combination to determine the number of high-speed devices and blowers that can run before the heat is disabled. i.e. A2 and A3 in the ON position and A4 in the OFF position will allow the heater to operate with up to 3 high-speed pumps (or two HS Pumps and Blower) running at the same time. Heat is disabled when the fourth high-speed pump or blower is turned on.

Note: A2/A3/A4 all off = No heat with any high-speed pump or blower.

Assignable DIP Switches

Α7 In "ON" position, enables a 5-minute cooldown for some gas heaters (Cooling Time B). In "OFF" position, enables a 1-minute cooldown for electric heaters (Cooling Time A).

Undesignated switches are not assigned a function.

Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending. © Copyright 2014 Balboa Water Group.



ON 🕨

S1

Jumper Definitions

J109	Not present on BP6013 board.	
 J91	Not present on BP6013 board.	
J30	Do Not Use	
J31	Jumper on 1 pin with 2.0kW or smaller heater Jumper on 2 pins with a 3.0kW or higher heater	J31 🛃
J29	Heater Disable Switch Connection. If J29 is shorted by any means, the heater will not run until J29 is no longer shorted. If J29 is shorted during power-up "J29" will appear on the panel. The message can be dismissed with a button press, and is the only control panel notification of J29 being shorted. No message is displayed if J29 is shorted after power-up, but the heater will not run until J29 is no longer shorted.	J29 💍
	J29 expects a switch closure (not a voltage) as the command signal. In some areas, a local power company may offer discounts based on voluntary "power shedding" devices that may be installed	d in conjunction with the spa.
J25, J26, J27	Not present on BP6013 board.	
 J24	Jumper on center two pins (230V) when heater is running at 240V.	230V

Two Jumpers installed; one on left 2 pins and one on right 2 pins (115V) when heater is running at 120V.



Warning!

Setting DIP switches or jumpers incorrectly may cause abnormal system behavior and/or damage to system components. Refer to Switchbank illustration on Wiring Configuration page for correct settings for this system. Contact Balboa if you require additional configuration pages added to this tech sheet.



Replacement Parts

PCBA: Main PCBA:	56613-04 3.0kW Models 56732-03 2.0kW Models			
Expander PCBA:	N/A			
HEATER(s):				
Plug + Click Heater Kit:		58300 3.0kW 58301 3.0kW 58302 3.0kW 58289 2.0kW 58397 2.0kW 58394 2.0kW	825 INC Titanium 800 Inc 825 Inc	
Temp Sensor Kit:		53605	Intanium	
CABLES:		N/A		
FUSES:				
Part Number	Amperage		Location	
30136 20600 26397 30122	30A 3A 1/8A 10A		F6, F8 F4 F3 F2, F7	



General Features		
Feature	Default	
Pump 1 in Filter Cycle (Circ Only)	No	
Pump 1 Low Timer	30 Minutes	Applies in non-circ Setups (configurations) only
General Pump Timer	15 Minutes	Applies to all pumps, except Pump 1 low in Non-Circ Setups
Blower Timer	15 Minutes	
Mister Timer	15 Minutes	
Light Timer	240 Minutes	
Circ (when enabled)	Programmable + Polling]
Cleanup Cycle	30 Minutes	
Cleaup as Preference setting	Yes	
Ozone	With Heater Pump*	
Ozone Suppression	OFF	
Pump Purge	60 Seconds	
Blower Purge	30 Seconds	
Mister Purge	5 Seconds	
Purge Type	Serial - Pumps at lowes	it speed

* The heater Pump can be either a Circ Pump or Pump 1 Low.

Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending.



Template 56377 10-05-12

Temperature Features

Feature	Default
Temperature Display	°C

All temperatures must be specified in °F. The system converts °F to °C dynamically. If Celsius is required for default settings, choose a desired °C value that (after rounding) corresponds to a Fahrenheit value.

°C	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	1 9	20	21	22
°F	39	41	43	45	46	48	50	52	54	55	57	59	61	63	64	66	68	70	72
°C	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	
°F	73	75	77	79	81	82	84	86	88	90	91	93	95	97	99	100	102	104	
Hi-Ra	ange I	1in.S	et Tei	mp				80°F											
Hi-Ra	ange I	lax. S	Set Te	mp				104°	F										
Hi-Ra	ange [Defaul	lt Tem	ıp*				100°	F										
Lo-Ra	ange l	4in.S	Set Te	mp				50°F											
Lo-Ra	ange l	Max. S	Set Te	mp				99°F											
Lo-Ra	ange l	Defau	lt Terr	ıp*				70°F											
Freez	e Thre	esholo	d					44°F											
Freez	е Тур	е						Rotat	ting -	Pump	s at L	owest	: Spee	d					
Temp	Lock	Туре						Temp	+ Set	tings									

*May be changed by end-user (if enabled)



Dofault

Time Features	
---------------	--

Fosturo

Default
24 Hour
20:00 (8:00 PM)
2 Hours
OFF
08:00 (8:00 AM)
15 Minutes
Disabled
OFF
21:00 (9:00 PM)
15 Minutes
1 Minute
5 Minutes

*May be changed by end-user (if enabled)



Reminder Features

Feature	Default
Reminders Shown*	Yes
Check pH	OFF
Check Sanitizer	OFF
Clean Filter	30 Days
Test GFCI	65 Days
Drain Water	100 Days
Change Cartridge	OFF
Clean Cover	OFF
Treat Wood	OFF
Change Filter	365 Days

*May be changed by end-user (if enabled)



Special Features Feature

Default

	Deraute	
Special Amperage Rule A	No Limitation	
pecial Amperage Rule B 1 High Speed Pump Maximum, and also Blower turns off with 1 High Speed		
Drain Mode	Disabled	
Demo Mode	Disabled	
GFCI Trip	Not Applicable for CE Models	
Ozone Slaved to Heater Pump	Yes in circ setups	
	No in non-circ setups	
Dual Voltage Heater	Always Input Voltage	
Safety Suction	Disabled	



TP800 Panel Configuration


Button Layout Table

Feature #	Setup 1	Setups 2 & 7	Setup 3	Setups 4 & 8	Setup 5	Setups 6 & 9
A1	N/A	N/A	N/A	N/A	N/A	N/A
A2	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1
A3	Jets 2	Jets 2	Blower	Blower	Light 1	Light 1
A4	Light 1	Light 1	Light 1	Light 1	Invert	Invert
A5	Invert	Invert	Invert	Invert	Undefined	(Circ Icon)
A6	Undefined	(Circ Icon)	Undefined	(Circ Icon)	Undefined	Undefined
A7	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A8	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A9	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A10	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A11	N/A	N/A	N/A	N/A	N/A	N/A
A12	N/A	N/A	N/A	N/A	N/A	N/A
A13	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A14	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A15	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A16	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
B1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1
B2	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
B3	Jets 2	Jets 2	Blower	Blower	Undefined	Undefined
B4	Light 1	Light 1	Light 1	Light 1	Light 1	Light 1




TP800 Panel Configuration

Spa Screen

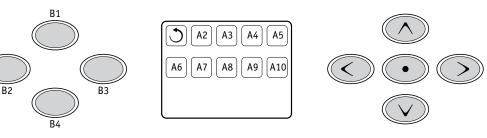

Note: Button B2 is ALWAYS unused on TP800 when used with this sytsem. A custom overlay will be required.

Shortcuts Screen

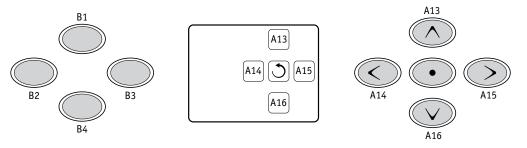

Note: Buttons 11 and 12 are not used in this configuration.

Button 1 is fixed.



TP600 Panel Configuration

Button Layout Table

Button #	Setups 1, 2 & 7	Setups 3, 4 & 8	Setups 5, 6 & 9
1	Jets 1	Jets 1	Jets 1
2	Jets 2	Blower	Undefined
3	Invert	Invert	Invert
4	Up	Up	Up
5	Light 1	Light 1	Light 1
6	Down	Down	Down
LED 1	Jets 1	Jets 1	Jets 1
LED 2	Jets 2	Blower	Undefined
LED 3	Light 1	Light 1	Light 1
LED 4	Heat On	Heat On	Heat On








TP400 Panel Configuration

Button Layout Table for TP400T

Button #	Setups 1, 2 & 7	Setups 3, 4 & 8	Setups 5, 6 & 9
1	Temperature	Temperature	Temperature
2	Jets 1	Jets 1	Jets 1
3	Light 1	Light 1	Light 1
4	Jets 2	Blower	Undefined
LED 1	Heater ON	Heater ON	Heater ON
LED 2	Jets 1 ON	Jets 1 ON	Jets 1 ON
LED 3	Light ON	Light ON	Light ON
LED 4	Jets 2 ON	Blower ON	Undefined

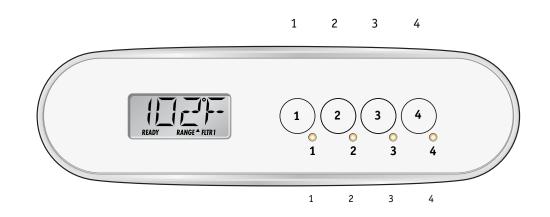

TP400T CE

50260-XX Includes overlay PN 12511.

Button Layout Table for TP400W

Button Eayout lable for		
All Setups		
Up		
Down		
Light 1		
Jets 1		
Heater ON		
Undefined	.	
Light ON		
Jets 1 ON		
	All Setups Up Down Light 1 Jets 1 Heater ON Undefined Light ON	

Use the TP400W for setups that only have one pump (No Blower or Pump 2).

TP400W CE

50259-XX Includes overlay PN 12510.



Auxilliary Panel Features on Bank 1*FeatureDefaultAux Button A1Jets 1

Aux Button A2	Jets 2 in Setups 1, 2 & 7 Blower in Setups 3, 4 & 8 Undefined in Setups 5, 6 & 9
Aux Button A3	Undefined
Aux Button A4	Light

*Bank 1 consists of J5 on the Main Circuit Board. Aux Connection Splitter PN 25257 may be required.

Buttons that are assigned to equipment that is not defined in a Setup will not do anything in that Setup.

Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending.



Template 56377 10-05-12

25 56610-05_56611-05_56612-05_56731-04_56941_56986_97_B

Auxilliary Panel Features


AX10 Panels on Bank 1*

 A1, AX10A1
 No 0/L
 52803

 A2, AX10A2
 No 0/L
 52804

 A3, AX10A3
 No 0/L
 52805


 A4, AX10A4
 No 0/L
 52806

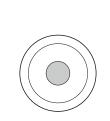

Call Customer Service for additional information about Auxiliary Panels.

*Bank 1 consists of J5 on the Main Circuit Board. Aux Connection Splitter PN 25257 may be required.



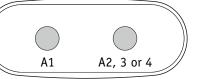

AX20 Auxiliary Panel plugged into Bank 1 will operate A1 + A2, A3 or A4.

AX40

AX40

No O/L 52799

AX40 Auxiliary Panel plugged into Bank 1 will operate A1 + A2, A3 and A4.

Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending.

A2

Α3

Α4

A1

