BP2100G0 Tech Sheet

Customer: Balboa Water Group

Part Number: 56663-04 825 Incoloy 3kW

56664-04 Titanium 3kW 59645 825 Incoloy 2kW

Custom Box Overlay

Box Overlay Part Number N/A

CE System Model: BP21-BP2100G0-RCA3.0K CE System Model: BP21-BP2100G0-RCA2.0K

Software Version ID: M100_225 V65.0

Software Version: 65.0

File Name: BP2100_65.0_BP2100G0_C8ZSW8.hex

Configuration Signature: 4EB7B6FE

Eng. Project Number: 5852

Control Panels:

spaTouch™3 Any version (version 3.2 or later required for Clim8zone™ heat pump support)

spaTouch™2 Any version (version 2.19 or later required for CHROMAZON∃™ support; version 2.36 or later required for Clim8zone™ heat pump support)

TP700 Any version (version 1.27 or later required for Clim8zone™ heat pump support*)

TP600 Version 2.7 and later (Version 2.12 or later required for bba™/bba™2 On/Off control via menu)


TP500 Any version -- only compatible with those Setups that have at most 2 controllable water devices (pumps/blower)

TP400T CE Version 2.7 and later (TP400T US should <u>not</u> be used) (Version 2.12 or later required for bba[™]/bba[™]2 On/Off control via menu)

TP400W CE Version 2.7 and later (TP400W US should <u>not</u> be used) (Version 2.12 or later required for bba[™]/bba[™]2 On/Off control via menu)

TP200T Any version
TP200W Any version



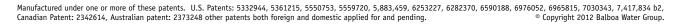



System Revision History

Part #	EPN	Date	Originator	Changes Made
ZT000114	4381	09-18-14	BWG	New generic BP2100 with <u>no</u> Expander board.
56662 56663 56664	4381	09-25-14	BWG	Release to production.
ıı .	N/A	12-29-14	BWG	Change model name to BP2100GO.
56662-01 56663-01 56664-01	4776	10-26-16	BWG	Updated to latest software version, adding topside-intergrated bba™2 support. Released to production.
56662-02 56663-02 56664-02	4890	05-08-17	BWG	Updated to latest software version, adding bba™/bba™2 On/Off support to TP600/TP400 Menus. Released to production.
56662-03 56663-03 56664-03	5098	01-31-19	BWG	Redesigned BP2100 board. + updated software to support CHROMAZON∃™.
ш	"	10-21-19	BWG	Correct typos in "BP2X-WIRE kit" section of wiring diagram part B.
56663-04 56664-04	5663	09-14-22	BWG	Update to support Clim8zone™ heat pump. Update board over-voltage protection. 56662-03 was obsoleted earlier.
59645	5852	04-23-24	BWG	Create 2.0 kW version.

bba™2 / bba™3 (Balboa Bluetooth Amp) connection is documented separately.

bba[™]2 / bba[™]3 is integrated into graphic display panels (including TP700 and spaTouch[™]).

With TP600/500/400/200, use the "BT" entry on the menu to toggle bba™2 / bba™3 power On/Off.



Basic Functions Setups 1-14

Power Requirements:

Single Service [3 wires (line, neutral, ground)]
230VAC, 50/60Hz*, 1b, 32A, (Circuit Breaker rating = 40A max.)

Dual Service [5 wires (line 1, neutral 1, line 2, neutral 2, ground)]
230VAC, 50/60Hz, 2b, 16A, (Circuit Breaker rating = 20A max each phase line.)

3-Service [5 wires (line 1, line 2, line 3, neutral, ground)]
230VAC line-to-neutral**, 50/60Hz*, 3b, 16A, (Circuit Breaker rating = 20A max each phase line.)

HiPot Testing Note:

Disconnect slip terminal with green wires from J6 prior to performing HiPot test. Failure to disconnect may cause a false failure of the test. Reconnect terminal to J6 after successful completion of HiPot test.

IMPORTANT - Service must include a neutral wire, with a line to neutral voltage of 230VAC.

In 3x16A Service:

Pump 2 and Blower (if any) are on one service.

The Heater is on another service.

Everything else is on the remaining service.

In 2x16A Service:

Pump 2, Blower (if any), and the Heater are on one service.

Everything else is on the other service.



^{*} BP systems automatically detect 50Hz vs 60Hz. However, power frequency (50Hz vs 60Hz) is just one of many differences between North American (UL) and CE power, and it is because of these other differences that different BP systems must be used for UL vs CE territories. Also, there are a few countries that use CE power but 60 Hz (such as South Korea) which need CE systems, and a few countries that use UL power but 50 Hz which need UL systems.

^{** 3-}phase service measured line-to-line will read about 400V, but BP systems do not use it line-to-line.

Basic Functions Setups 1-14

System (Ouputs:				In Group 3:
Pump 1	230VAC	2-Speed 1-Speed in	11A max** Setups 6 - 9	15-minute timer for High Speed, 15-Minute timer for Low Speed	X
		neater pump r 20 GPM thro	in Setups 10 - ough heater	- 14	
Pump 2	230VAC		11A max** Setups 2, 3, 6 Setups 4, 5, 8		
Blower	230VAC	1 Speed Unused in S		15-minute timer , 7, 9, 10, 12 & 14	
Circ Pump		1-Speed neater pump r 20 GPM thro	in Setups 1 –	Programmable Filtration Cycles + Polling 9	
0zone	230VAC		.5A max**	Slaved to Circ Pump in Setups 1 - 9 Independent in Setups 10 - 14	
Spa Light	10VAC	0n/0ff	2A* max	240-minute timer.	
AV + C8Z***	230VAC	Hot	2A+8A max	Always on	
Heater	3.0kW @ 24	40VAC max			

^{* 2}A max limit is shared by On/Off Spa Light <u>and</u> CHROMAZON∃™.

Note: When using Clim8zone™ in 3x16A, switches A2 and A3 must be Off and switch A8 must be On. This combination of switches causes only items in Group 3 -- Pump 1 at High Speed -- to turn both the electric Heater and Clim8zone™ Off. In this situation, the electric Heater and Clim8zone™ can continue to run while Pump 2 and/or Blower are On at any speed.




^{**} These are individual maximums but depending on the electrical services they may need to be reduced.

^{***} Optional splitter PN 22934 can be used to connect two things, such as an audio device and Clim8zone™(C8Z), to J33.

Hardware Setup

Wiring Diagram

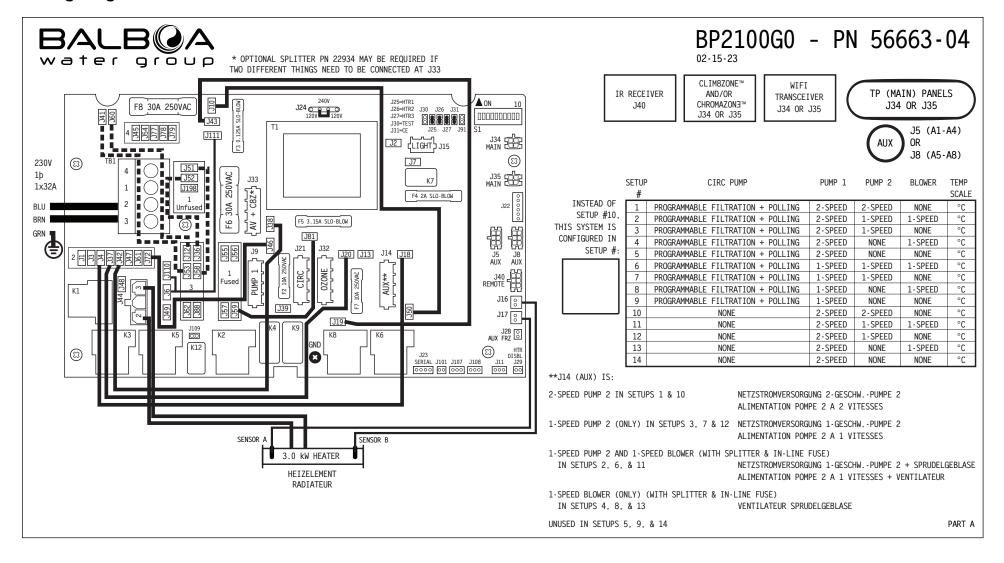

Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending.



Hardware Setup

Settings


SINGLE SERVICE 230V 1b / 1x32A. DUAL SERVICE 230V 2x1b / 3x16A. THREE-SERVICE 230V 3b / 3x16A LOCATION MAX AMPS NETZSTROMVERSORGUNG 2/1-GESCHW.-PUMPE 1 11A ALIMENTATION POMPE 1 A 2/1 VITESSES 2/1-SPD PUMP 1 J14 AUX**: 2/1-SPD PUMP 2 +/ BLOWER 11A+5A NETZSTROMVERSORGUNG 2/1-GESCHW.-PUMPE 2 +/ SPRUDELGEBLASE ALIMENTATION POMPE 2 A 2/1 VITESSES +/ VENTILATEUR J15 10V BELEUCHTUNG ECLAIRAGE BAIN HYDRO SPA LIGHT 2A* (@10V) J21 KREISLAUF PUMPE POMPE DE CIRCULATION CIRC PUMP 2A J32 OZONGENERATOR GENERATOROZONE OZONE GENERATOR 0.5A J33 AV + CLIM8ZONE™ (C8Z) 2A + 8A J44 HEATER 3.0kW


* 2A LIMIT IS SHARED BY J15 SPA LIGHT AND CHROMAZON∃™

FOR SUPPLY CONNECTIONS, USE CONDUCTORS SIZED ON THE BASIS OF 60°C AMPACITY BUT RATED MINIMUM OF 90°C.

USE COPPER CONDUCTORS ONLY. EMPLOYER UNIQUEMENT DES CONDUCTEURS DE CUIVRE.

TORQUE RANGE FOR MAIN TERMINAL BLOCK (TB1): 27-30 IN. LBS. (31.1-34.5 kg cm)

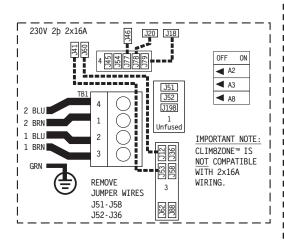

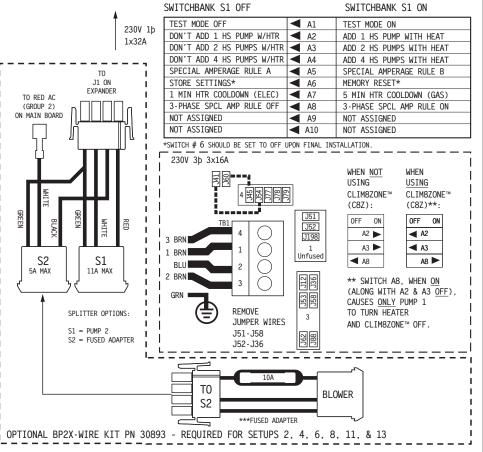



BP2100G0 - PN 56663-04

PART B

Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending.



Setup Reference Table

Setup #	Circ Pump	Pump 1	Pump 2	Blower	Temp Scale
1	Programmable Filtration + Polling	2-Speed	2-Speed	None	°C
2	Programmable Filtration + Polling	2-Speed	1-Speed	1-Speed	°C
3	Programmable Filtration + Polling	2-Speed	1-Speed	None	°C
4	Programmable Filtration + Polling	2-Speed	None	1-Speed	°C
5	Programmable Filtration + Polling	2-Speed	None	None	°C
6	Programmable Filtration + Polling	1-Speed	1-Speed	1-Speed	°C
7	Programmable Filtration + Polling	1-Speed	1-Speed	None	°C
8	Programmable Filtration + Polling	1-Speed	None	1-Speed	°C
9	Programmable Filtration + Polling	1-Speed	None	None	°C
10	None	2-Speed	2-Speed	None	°C
11	None	2-Speed	1-Speed	1-Speed	°C
12	None	2-Speed	1-Speed	None	°C
13	None	2-Speed	None	1-Speed	°C
14	None	2-Speed	None	None	°C

System (and any replacement board) is shipped in Setup 10

Color Key	Output
	J14 (Aux) and splitter and in-line Blower fuse
	J14 (Aux) on Main Board



Changing Software Setups with spaTouch™ Icon-Driven Panels

Test Menu Access (S1, Switch 1 ON) Service Technician ONLY.

DANGER! HIGH VOLTAGE WILL BE ACCESSIBLE! SERVICE TECHNICIAN ONLY!

While the system is running, move DIP Switch 1 (on S1 on the Main circuit board) to ON. The system will enter Test Mode.

Moving DIP Switch 1 to OFF will exit Test Mode.

ON D



wider.

To Change Software Setups:

While in Test Mode, press the indicated icons to move from screen to screen.





Settings (5)
Test

The example screens shown here are from the

spaTouch 1 Icon-Driven Panel, but the screens on the spaTouch 2 Panel are similar. The main

difference is that the spaTouch 2 display is



Once on the Setup Selection screen, press the Up or Down icon to select the desired Setup Number, then press the Check Mark icon to confirm and to have the spa restart.

After the system restarts, you may see a message that "The settings have been reset"; this is normal after changing Setups with DIP Switch 6 in the OFF position. Press "Clear" to dismiss this message.



Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending. © Copyright 2012 Balboa Water Group.



Changing Software Setups with TP600/TP500/TP400/TP200

Test Menu Access (S1, Switch 1 ON) Service Technician ONLY.

DANGER! HIGH VOLTAGE WILL BE ACCESSIBLE! SERVICE TECHNICIAN ONLY!

While the system is running, move DIP Switch 1 (on S1 on the Main circuit board) to ON. The system will enter Test Mode.

Moving DIP Switch 1 to OFF will exit Test Mode.

Software Setups

Under the TEST Menu, the Setup screen will allow changing the Setup from 1 to any number established by the Manufacturer. Changing the Setup may require wiring changes as well.

You will have 1 minute to complete the Setup change after you manually exit Priming Mode. (Once familiar with the process, the Setup change should take less than 15 seconds.)











When the panel displays RUN PMPS PURG AIR, press any Temperature button ONCE to exit Priming Mode. You should see "---T" where the T indicates the system is in Test Mode.



Continued on Next Page.



As soon as Switch #1 is placed

System is in Test Mode

in the ON position, the temperature will show

"T" after it instead of F or C, indicating the

Changing Software Setups with TP600/TP500/TP400/TP200 Continued

Again, You will have 1 minute to complete the setup change after you manually exit Priming Mode.


NOTE: Wherever the below says Warm or Temp followed by Light, on the TP500 press Menu instead of Warm or Temp followed by Light. And whenever the chart below says Light, on the TP500 press Menu insead of Light.

Immediately after exiting Priming Mode, press this sequence of buttons: Warm*, Light, Warm, Warm, Warm, Continue to press Warm until the display shows the Setup Number (S-01, S-02, etc.) you want to switch to. When the correct Setup Number is showing, press Light once, and the system will reset, using the newly-selected Setup from that point on.

Move DIP Switch 1 to the OFF position to take the spa out of Test Mode. °F or °C will replace °T.

Using a permanent marker, write the Setup number on the Setup label mounted inside the system lid (right). This is very important to any service person in the future who may need to replace a circuit board or system and needs to change the Setup on a replacement part while in the field.

NOTE: Changing the Setup may require wiring changes as well - refer to the wiring diagram or wiring diagram addendum.

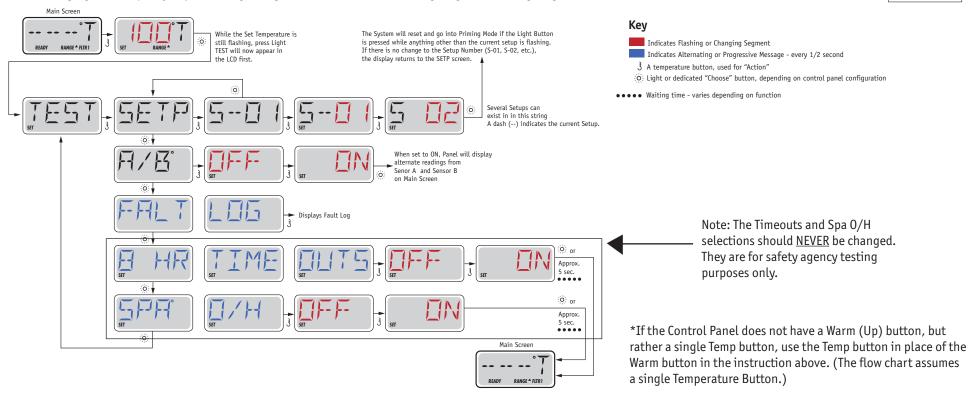

Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending. © Copyright 2012 Balboa Water Group.

Template 56377 10-05-12



THIS SYSTEM IS

CONFIGURED AS SETUP #

Equipment Expansion

Expansion Features								
Control Connection	Default	Fuse						
Relay 1 (J101)	Undefined	None						
Relay 7/8 (J107)	Undefined	None						
Relay 9/10 (J108)	Undefined	None						



DIP Switch Functions

Fixed-fuction DIP Switches

A1 Test Mode (normally Off).

A2 In "ON" position, add one high-speed pump (or blower) with Heater.

A3 In "ON" position, add two high-speed pumps (or 1 HS Pump and Blower) with Heater.

A4 In "ON" position, add four high-speed pumps (or 3 HS Pumps and Blower) with Heater.

A5 In "ON" position, enables Special Amperage Rule B. See Special Features section under Configuration Options for functionality with your system.

In "OFF" position, enables Special Amperage Rule A.

A6 Persistent memory reset (Used when the spa is powering up to restore factory settings as determined by software configuration).

A2, A3, and A4 work in combination to determine the number of high-speed devices and blowers that can run before the heat is disabled. i.e. A2 and A3 in the ON position and A4 in the OFF position will allow the heater to operate with up to 3 high-speed pumps (or two HS Pumps and Blower) running at the same time. Heat is disabled when the fourth high-speed pump or blower is turned on.

Note: A2/A3/A4 all off = No heat with any high-speed pump or blower.

Assignable DIP Switches

A7 In "ON" position, enables a 5-minute cooldown for some gas heaters (Cooling Time B).

In "OFF" position, enables a 1-minute cooldown for electric heaters (Cooling Time A).

A8 In "ON" position, 3-Phase Special Amperage Rule is enabled.

In "OFF" position, 3-Phase Special Amperage Rule is disabled.

Undesignated switches are not assigned a function.



Jumper Definitions

J109	Non Applicable on CE models	J109 🎅
J91	Real Time Clock Enable/Disable Note: This Jumper should NOT be shorted when the Control Panel can display time of day.	J91 ©a
J30	Do Not Use	
J31	Jumper on 1 pin with 2.0kW or smaller heater Jumper on 2 pins with a 3.0kW or higher heater	J31 🌠
J29	Heater Disable Switch Connection. If J29 is shorted by any means, the heater will not run until J29 is no longer shorted. If J29 is shorted during power-up "J29" will appear on the panel. The message can be dismissed with a button press, and is the only control panel notification of J29 being shorted. No message is displayed if J29 is shorted after power-up, but the heater will not run until J29 is no longer shorted.	J29 👸
	J29 expects a switch closure (not a voltage) as the command signal. In some areas, a local power company may offer discounts based on voluntary "power shedding" devices that may be installed.	d in conjunction with the spa.
J25, J26, J27	Heater Type Settings. Note: Factory Configured do not change.	J27 J25 21 J26
J24	Jumper on center two pins (230V) when heater is running at 240V. Two Jumpers installed; one on left 2 pins and one on right 2 pins (115V) when heater is running at 120V.	230V J24 © 0 0 0 115 15V

Warning!

Setting DIP switches or jumpers incorrectly may cause abnormal system behavior and/or damage to system components. Refer to Switchbank illustration on Wiring Configuration page for correct settings for this system. Contact Balboa if you require additional configuration pages added to this tech sheet.

Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending. © Copyright 2012 Balboa Water Group.



Replacement Parts

PCBA:

Main PCBA: 59156-01 3.0 kW 59646 2.0 kW

Expander PCBA: N/A

HEATER(s):

Plug + Click Heater Kit: 58107R16 3.0kW 825 Inc

55626R16 3.0kW Titanium

58115R16 2.0kW 825 Inc

Temp Sensor Kit: 53605

CABLES: N/A

FUSES:

Part Number	Amperage*	Location		
30136	30A	F6, F8		
26307	2A	F4		
24825	0.125A	F3		
26904	10A	F2, F7		
26976	3.15A	F5		

^{*} The amperages shown above are only intended for identifying fuses on our boards. They are not complete descriptions of those fuses. Please use the part numbers at the left to order fuses directly from Balboa.



Default

60 Seconds

30 Seconds

5 Seconds

General Features

Fastura

Pump Purge

Blower Purge

Mister Purge

Delault				
No				
15 Minutes				
15 Minutes				
15 Minutes				
15 Minutes				
240 Minutes				
Programmable + Polling				
30 Minutes				
Yes				
763				
With Heater Pump*				
OFF				



Purge Type Serial - Pumps at lowest speed

^{*} The heater Pump can be either a Circ Pump or Pump 1 Low.

°C

Temperature Features

Feature Default

Temperature Display

All temperatures must be specified in °F. The system converts °F to °C dynamically. If Celsius is required for default settings, choose a desired °C value that (after rounding) corresponds to a Fahrenheit value.

°C	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
°F	39	41	43	45	46	48	50	52	54	55	<i>57</i>	59	61	63	64	66	68	70	72
°C	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	
°F	73	75	77	70	21	82	8/1	86	22	an	01	0 3	95	97	aa	100	102	10/	

Hi-Range Min. Set Temp	80°F
Hi-Range Max. Set Temp	104°F
Hi-Range Default Temp*	100°F
Lo-Range Min. Set Temp	50°F
Lo-Range Max. Set Temp	99°F
Lo-Range Default Temp*	70°F
Freeze Threshold	44°F

Freeze Type Rotating - Pumps at Lowest Speed

Temp Lock Type Temp + Settings



^{*}May be changed by end-user (if enabled)

Time Features

Default
24 Hour
20:00 (8:00 PM)
2 Hours
OFF
08:00 (8:00 AM)
15 Minutes
Disabled
OFF
21:00 (9:00 PM)
15 Minutes
1 Minute
5 Minutes



^{*}May be changed by end-user (if enabled)

Reminder Features

Feature	Default			
Reminders Shown*	Yes			
Check pH	<i>OFF</i>			
Check Sanitizer	<i>OFF</i>			
Clean Filter	30 Days			
Test GFCI	65 Days			
Drain Water	100 Days			
Change Cartridge	OFF			
Clean Cover	0FF			
Treat Wood	<i>OFF</i>			
Change Filter	365 Days			

BALB@A

^{*}May be changed by end-user (if enabled)

Default

Special Features Feature

Special Amperage Rule A No Limitation

Special Amperage Rule B 1 High Speed Pump Maximum, and also Blower turns off with 1 High Speed Pump

3-Phase Special Amperage Rule Pumps in Group 3 (ie, Pump 1) are the only ones which turn the Electric Heater and Clim8zone™ Off

Pumps or Blower not in Group 3 (eq, Pump 2) do not turn the Electric Heater and Clim8zone™ Off

Drain Mode Disabled
Demo Mode Disabled

GFCI Trip Not Applicable for CE Models

Ozone Slaved to Heater Pump Yes in circ setups

No in non-circ setups

Dual Voltage Heater Always Input Voltage

Safety Suction Disabled

TP900 Panel Configuration


Button Layout Table

Feature	Setups 10 & 12	Setups 1, 3	Setup 13	Setups 4 & 8	Setup 14	Setups 5 & 9	Setup 11	Setups 2 & 6
#		& 7	, , , , , , , , , , , , , , , , , , ,				-	
A1	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
A2	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1
А3	Jets 2	Jets 2	Blower	Blower	Light 1	Light 1	Jets 2	Jets 2
A4	Light 1	Light 1	Light 1	Light 1	Invert	Invert	Blower	Blower
A5	Invert	Invert	Invert	Invert	Undefined	(Circ Icon)	Light 1	Light 1
A6	Undefined	(Circ Icon)	Undefined	(Circ Icon)	Undefined	Undefined	Invert	Invert
A7	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	(Circ Icon)
A8	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A9	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A10	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A11	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
A12	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
A13	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1
A14	Jets 2	Jets 2	Blower	Blower	Undefined	Undefined	Jets 2	Jets 2
A15	Light 1	Light 1	Light 1	Light 1	Light 1	Light 1	Blower	Blower
A16	Invert	Invert	Invert	Invert	Invert	Invert	Light 1	Light 1

A Circ Icon will appear when a Circ Pump is configured.



TP900 Panel Configuration

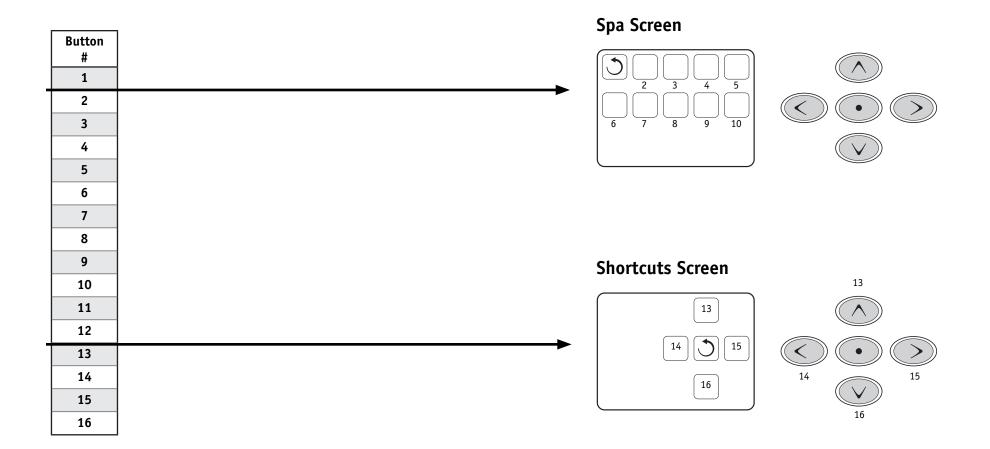

TP800 Panel Configuration and TP700 Notes

Button Layout Table

Template 56377 10-05-12


Feature #	Setups 10 & 12	Setups 1, 3 & 7	Setup 13	Setups 4 & 8	Setup 14	Setups 5 & 9	Setup 11	Setups 2 & 6
A1	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
A2	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1
А3	Jets 2	Jets 2	Blower	Blower	Light 1	Light 1	Jets 2	Jets 2
A4	Light 1	Light 1	Light 1	Light 1	Invert	Invert	Blower	Blower
A 5	Invert	Invert	Invert	Invert	Undefined	(Circ Icon)	Light 1	Light 1
A6	Undefined	(Circ Icon)	Undefined	(Circ Icon)	Undefined	Undefined	Invert	Invert
A7	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	(Circ Icon)
A8	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A9	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A10	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A11	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
A12	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
A13	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A14	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A15	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A16	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
B1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1
B2	Jets 2	Jets 2	Undefined	Undefined	Undefined	Undefined	Jets 2	Jets 2
В3	Undefined	Undefined	Blower	Blower	Undefined	Undefined	Blower	Blower
B4	Light 1	Light 1	Light 1	Light 1	Light 1	Light 1	Light 1	Light 1


TP700


The TP700 works with all Setups on this system. It uses a different overlay depending on whether the number of Jet pumps is 1 or 2. The button labeled Aux controls the blower if there is one.

TP800 Panel Configuration


Spa Screen

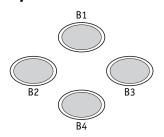





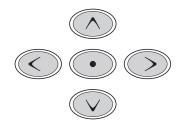

Shortcuts Screen

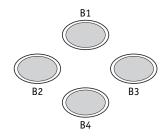

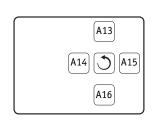

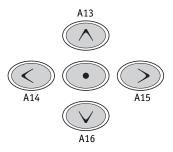

Note: Buttons 11 and 12 are not used in this configuration.

Button 1 is fixed.

A Circ Icon will appear when a Circ Pump is configured.



TP600 Panel Configuration

Button Layout Table

Button #	Setups 1, 3, 7, 10 & 12	Setups 4, 8 & 13	Setups 5, 9 & 14	Setups 2, 6 & 11
1	Jets 1	Jets 1	Jets 1	Jets 1
2	Jets 2	Blower	Undefined	Jets 2
3	Invert	Invert	Invert	Blower
4	Up	Up	Up	Up
5	Light 1	Light 1	Light 1	Light 1
6	Down	Down	Down	Down
LED 1	Jets 1	Jets 1	Jets 1	Jets 1
LED 2	Jets 2	Blower	Undefined	Jets 2
LED 3	Light 1	Light 1	Light 1	Light 1
LED 4	Heat On	Heat On	Heat On	Heat On



TP600

55676-XX


No Overlay



TP400/TP200 Panel Configuration

Button Layout Table for TP400T/TP200T


Button #	Setups 1, 3, 7, 10 & 12	Setups 4, 8 & 13	Setups 5, 9 & 14
1	Temperature	Temperature	Temperature
2	Jets 1	Jets 1	Jets 1
3	Light 1	Light 1	Light 1
4	Jets 2	Blower	Undefined
LED 1	Heater ON	Heater ON	Heater ON
LED 2	Jets 1 ON	Jets 1 ON	Jets 1 ON
LED 3	Light ON	Light ON	Light ON
LED 4	Jets 2 ON	Blower ON	Undefined

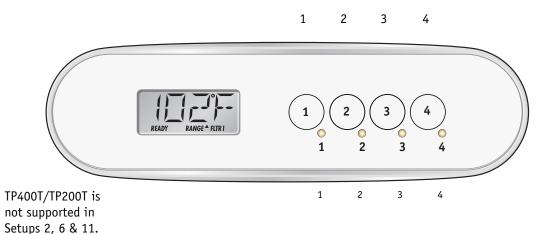

Button Layout Table for TP400W/TP200W

Button #	All Setups
1	Up
2	Down
3	Light 1
4	Jets 1
LED 1	Heater ON
LED 2	Undefined
LED 3	Light ON
LED 4	Jets 1 ON

Use the TP400W/TP200W for setups that only have one pump (No Blower or Pump 2).



TP400T CE

50260-XX Includes overlay PN 12511.

TP200T

57281-XX with no overlay 57282-XX includes overlay PN 17325

TP400W CE

TP200W

50259-XX includes overlay PN 12510

57290-XX with no overlay

57283-XX includes overlay PN 17374

Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending.



Auxiliary Panel Features on Bank 1*

Feature	Default
Aux Button A1	Jets 1
Aux Button A2	Jets 2
Aux Button A3	Blower
Aux Button A4	Light

Auxiliary Panel Features on Bank 2*

Feature	Default
Aux Button A5	Jets 1
Aux Button A6	Jets 2
Aux Button A7	Blower
Aux Button A8	Light

Buttons that are assigned to equipment that is not defined in a Setup will not do anything in that Setup.

*Bank 1 consists of J5 on the Main Circuit Board.

Bank 2 consists of J8 on the Main Circuit Board.

Aux Connection Splitter PN 25257 may be required.



Auxiliary Panel Features

AX10 Panels on Bank 1*

A1, AX10A1 No 0/L 52803
A2, AX10A2 No 0/L 52804
A3, AX10A3 No 0/L 52805 ▶
A4, AX10A4 No 0/L 52806



Call Customer Service for additional information about Auxiliary Panels.

AX10 Panels on Bank 2*

A5, AX10A1	No O/L	52803
A6, AX10A2	No O/L	52804
A7, AX10A3	No O/L	52805
A8. AX10A4	No O/I	52806


*Bank 1 consists of J5 on the Main Circuit Board.

Bank 2 consists of J8 on the Main Circuit Board.

Aux Connection Splitter PN 25257 may be required.

AX20


AX20 A1A2	No O/L	52800
AX20 A1A3	No O/L	52801
AX20 A1A4	No O/L	52802



AX20 Auxiliary Panel plugged into Bank 1 will operate A1 + A2, A3 or A4. AX20 Auxiliary Panel plugged into Bank 2 will operate A5 + A6, A7 or A8.

AX40

AX40 No 0/L 52799




AX40 Auxiliary Panel plugged into Bank 1 will operate A1 + A2, A3 and A4. AX40 Auxiliary Panel plugged into Bank 2 will operate A5 + A6, A7 and A8.



Remote Panel Features

Feature	Default
Remote Button A1	Jets 1
Remote Button A2	Jets 2
Remote Button A3	Undefined
Remote Button A4	Blower
Remote Button A5	Light
Remote Button A6	Undefined
Remote Button A7	Undefined
Remote Button A8	Undefined



Buttons that are assigned to equipment that is not defined in a Setup will not do anything in that Setup.

Remote Panel Part Number

Overlay Part Number