BP21MS2B Tech Sheet

Customer: Balboa Water Group

Part Number: 56630-04 825 Incoloy 3kW

56631-04 Titanium 3kW

Custom Box Overlay

Box Overlay Part Number N/A

CE System Model: BP21-BP21MS2B-RCA3.0K

Software Version ID: M100 225 V65.0

Software Version: 65.0

File Name: BP2100_65.0_BP21MS2B_TP4.hex

Configuration Signature: 4FEA5138

Eng. Project Number: 5663

Control Panels:

spaTouch™3 Any version (version 3.2 or later required for Clim8zone™ heat pump support)

spaTouch™2 Any version (version 2.19 or later required for CHROMAZON∃™ support; version 2.36 or later required for Clim8zone™ heat pump support)

Icon spaTouch™ Any version (version 3.36 or later required for bba™2 fully integrated functionality)

Menued spaTouch[™] Any version (version 2.8 or later required for bba[™]2 integrated functionality)

TP900 Version 3.1 and later (Version 3.13 or later required for bba™)

TP800 Version 3.1 and later (Version 3.13 or later required for bba™; version 4.11 or later required for bba™2 integrated functionality)

TP700 Any version

TP600 Version 2.7 and later (Version 2.12 or later required for bba™/bba™2 On/Off control via menu)

TP400T CE Version 2.7 and later (TP400T US should <u>not</u> be used) (Version 2.12 or later required for bba[™]/bba[™]2 On/Off control via menu)





System Revision History

Part #	EPN	Date	Originator	Changes Made
ZT000092	4272	04-23-14	BWG	New generic MicroSilk® system, with up to 2 Pumps, plus optional Blower and optional Circ.
56629 56630 56631	4272	05-01-14	BWG	Released to production.
56629-01 56630-01 56631-01	4503	04-23-15	BWG	Add TP400T support.
56629-02 56630-02 56631-02	4776	11-01-16	BWG	Updated to latest software version, adding topside-intergrated bba™2 support. Released to production.
56630-03 56631-03	5098	11-07-19	BWG	Redesigned BP2100 board + updated software to support CHROMAZON∃™ & M8. 56629-XX (800 Incoloy version) discontinued.
56630-04 56631-04	5663	05-11-23	BWG	Update to support Clim8zone™ heat pump. Update board over-voltage protection.

bba™2 / bba™3 (Balboa Bluetooth Amp) connection is documented separately.

bba™2 / bba™3 is integrated into graphic display panels (including TP700, TP800, TP900, and spaTouch™).

With TP600/TP400, use the "BT" entry on the menu to toggle bba™2 / bba™3 power 0n/0ff.



Basic Functions Setup 1-16

Power Requirements:

Single Service [3 wires (line, neutral, ground)] 230VAC, 50/60Hz*, 1þ, 32A, (Circuit Breaker rating = 40A max.)

Dual Service N/A

3-Service [5 wires (line 1, line 2, line 3, neutral, ground)] 230VAC line-to-neutral**, 50/60Hz*, 3b, 16A, (Circuit Breaker rating = 20A max each phase line.)

HiPot Testing Note:

Disconnect slip terminal with green wires from J6 prior to performing HiPot test. Failure to disconnect may cause a false failure of the test. Reconnect terminal to J6 after successful completion of HiPot test.

IMPORTANT - Service must include a neutral wire, with a line to neutral voltage of 230VAC.

Migrating From BP21MSSH:

If you are migrating from the BP21MSSH model to this BP21MS2B model, this chart shows how the Setup numbering has changed between these 2 models.

BP21MSSH Setup #	BP21MS2B Setup #
1	2
2	4
3	8
4	12
5	14
6	16



^{*} BP systems automatically detect 50Hz vs 60Hz. However, power frequency (50Hz vs 60Hz) is just one of many differences between North American (UL) and CE power, and it is because of these other differences that different BP systems must be used for UL vs CE territories. Also, there are a few countries that use CE power but 60 Hz (such as South Korea) which need CE systems, and a few countries that use UL power but 50 Hz which need UL systems.

^{** 3-}phase service measured line-to-line will read about 400V, but BP systems do not use it line-to-line.

Basic Functions Setup 1-16

System Ouputs:

```
15-minute timer for High Speed, 15-Minute timer for Low Speed
            230VAC
Pump 1
                        2-Speed
                                    12A max
                        1-Speed in Setups 5, 6, 9, 10
            This is the heater pump in Setups 11–16
            Must deliver 20 GPM through heater
                                  12A max
Pump 2
            230VAC
                        2-Speed
                                                15-minute timer
                        1-Speed in Setups 3-6, 13, 14
                        Unused in Setups 7-10, 15, 16
MicroSilk®
            230VAC
                        1-Speed
                                    8A max
                                                30-minute timer
            230VAC
                        1 Speed
                                    4A max
                                                15-minute timer
Blower
                        Unused in Setups 2, 4, 6, 8, 10, 12, 14, 16
            230VAC
Circ Pump
                        1-Speed
                                    2A max
                                                Programmable Filtration Cycles + Polling
            This is the heater pump in Setups 1–10
            Must deliver 20 GPM through heater
                                                Slaved to Circ Pump in Setups 1-10
            230VAC
                                    .5A max
0zone
                                                Independent in Setups 11–16
Spa Light
            10VAC
                        0n/0ff
                                    2A** max
                                                240-minute timer.
AV + C8Z***
            230VAC
                        Hot
                                    2A+8A max Always on
            3.0kW @ 240VAC max
Heater
```

MicroSilk® is a registered trademark of Jason International




^{** 2}A max limit is shared by On/Off Spa Light <u>and</u> CHROMAZON∃™.

^{***} Optional splitter PN 22934 can be used to connect two things, such as an audio device and Clim8zone™(C8Z), to J33.

Hardware Setup

Wiring Diagram

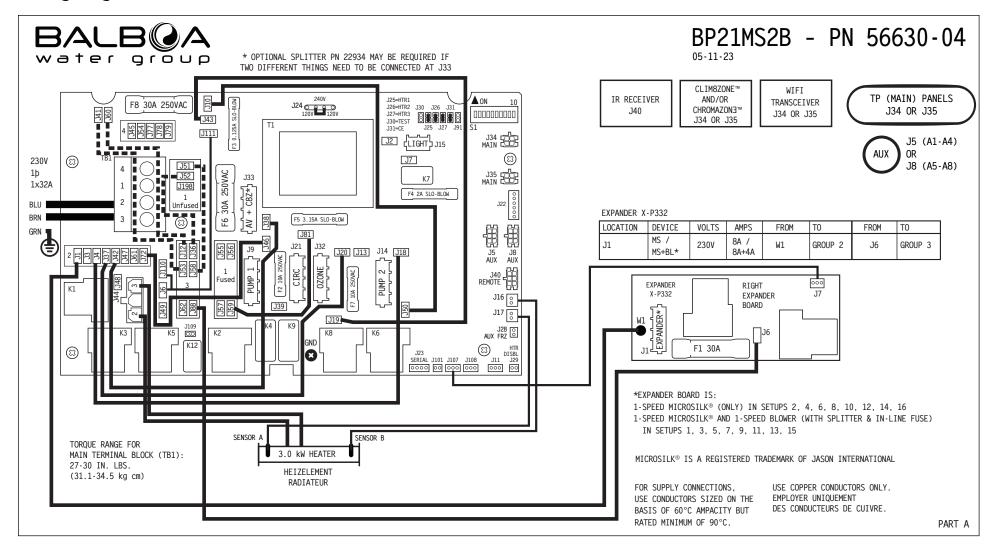




Hardware Setup

Settings

Template 56377 10-05-12

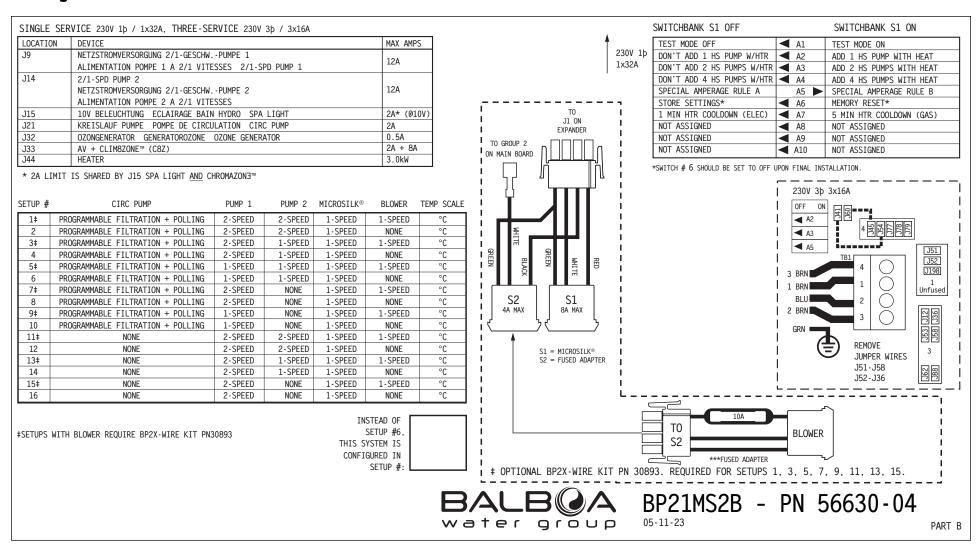



Setup Reference Table

Setup #	Circ Pump	Pump 1	Pump 2	MicroSilk®	Blower	Temp Scale
1	Programmable Filtration + Polling	2-Speed	2-Speed	1-Speed	1-Speed	°C
2	Programmable Filtration + Polling	2-Speed	2-Speed	1-Speed	None	°C
3	Programmable Filtration + Polling	2-Speed	1-Speed	1-Speed	1-Speed	°C
4	Programmable Filtration + Polling	2-Speed	1-Speed	1-Speed	None	°C
5	Programmable Filtration + Polling	1-Speed	1-Speed	1-Speed	1-Speed	°C
6	Programmable Filtration + Polling	1-Speed	1-Speed	1-Speed	None	°C
7	Programmable Filtration + Polling	2-Speed	None	1-Speed	1-Speed	°C
8	Programmable Filtration + Polling	2-Speed	None	1-Speed	None	°C
9	Programmable Filtration + Polling	1-Speed	None	1-Speed	1-Speed	°C
10	Programmable Filtration + Polling	1-Speed	None	1-Speed	None	°C
11	None	2-Speed	2-Speed	1-Speed	1-Speed	°C
12	None	2-Speed	2-Speed	1-Speed	None	°C
13	None	2-Speed	1-Speed	1-Speed	1-Speed	°C
14	None	2-Speed	1-Speed	1-Speed	None	°C
15	None	2-Speed	None	1-Speed	1-Speed	°C
16	None	2-Speed	None	1-Speed	None	°C

System (and any replacement board)
is shipped in Setup 6

Color	Output							
Key								
	XP332							
	XP332 and Splitter and in-line Blower fuse							
	J14 (Aux) on Main Board							



Changing Software Setups with spaTouch™ Icon-Driven Panels


Test Menu Access (S1, Switch 1 ON) Service Technician ONLY.

DANGER! HIGH VOLTAGE WILL BE ACCESSIBLE! SERVICE TECHNICIAN ONLY!

While the system is running, move DIP Switch 1 (on S1 on the Main circuit board) to ON. The system will enter Test Mode.

Moving DIP Switch 1 to OFF will exit Test Mode.

ON D

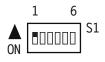


To Change Software Setups:

While in Test Mode, press the indicated icons to move from screen to screen.






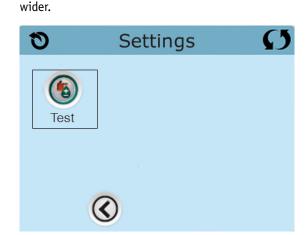

The example screens shown here are from the

spaTouch 1 Icon-Driven Panel, but the screens on the spaTouch 2 Panel are similar. The main

difference is that the spaTouch 2 display is

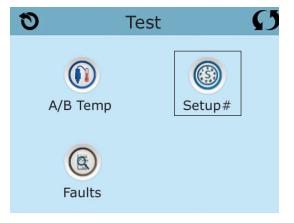

Once on the Setup Selection screen, press the Up or Down icon to select the desired Setup Number, then press the Check Mark icon to confirm and to have the spa restart.

After the system restarts, you may see a message that "The settings have been reset"; this is normal after changing Setups with DIP Switch 6 in the OFF position. Press "Clear" to dismiss this message.





Changing Software Setups with TP800 / TP900 / spaTouch™ Menued Panel

Test Menu Access (S1, Switch 1 ON) Service Technician ONLY.


DANGER! HIGH VOLTAGE WILL BE ACCESSIBLE! SERVICE TECHNICIAN ONLY!


While the system is running, move DIP Switch 1 (on S1 on the Main circuit board) to ON. The system will enter Test Mode.

Moving DIP Switch 1 to OFF will exit Test Mode.

Software Setups

Under the TEST Menu, the Setup screen will allow changing the Setup from 1 to any number established by the Manufacturer. Changing the Setup may require wiring changes as well.

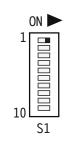

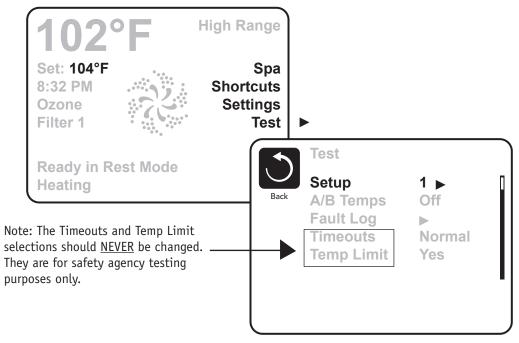



9


Changing Software Setups with TP600 / TP400

Test Menu Access (S1, Switch 1 ON) Service Technician ONLY.

DANGER! HIGH VOLTAGE WILL BE ACCESSIBLE! SERVICE TECHNICIAN ONLY!

While the system is running, move DIP Switch 1 (on S1 on the Main circuit board) to ON. The system will enter Test Mode.

Moving DIP Switch 1 to OFF will exit Test Mode.

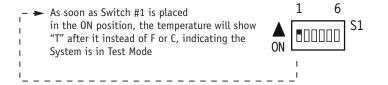

Software Setups

Under the TEST Menu, the Setup screen will allow changing the Setup from 1 to any number established by the Manufacturer. Changing the Setup may require wiring changes as well.

You will have 1 minute to complete the setup change after you manually exit Priming Mode. (Once familiar with the process, the Setup change should take less than 15 seconds.)











When the panel displays RUN PMPS PURG AIR, press any Temperature button ONCE to exit Priming Mode. You should see "---T" where the T indicates the system is in Test Mode.



Continued on Next Page.



Changing Software Setups with TP600 / TP400 Continued


Again, You will have 1 minute to complete the setup change after you manually exit Priming Mode.


Immediately after exiting Priming Mode, press this sequence of buttons: Warm*, Light, Warm, Warm, Warm, Warm. Continue to press Warm until the diplay shows the Setup Number (S-01, S-02, etc.) you want to switch to. When the correct setup number is showing, press Light once, and the system will reset, using the newly-selected Setup from that point on.

Move DIP Switch 1 to the OFF position to take the spa out of Test Mode. °F or °C will replace °T.

Using a permanent marker, write the Setup number on the Setup label mounted inside the system lid (right). This is very important to any service person in the future who may need to replace a circuit board or system and needs to change the Setup on a replacement part while in the field.

NOTE: Changing the Setup may require wiring changes as well - refer to the wiring diagram or wiring diagram addendum.

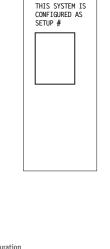

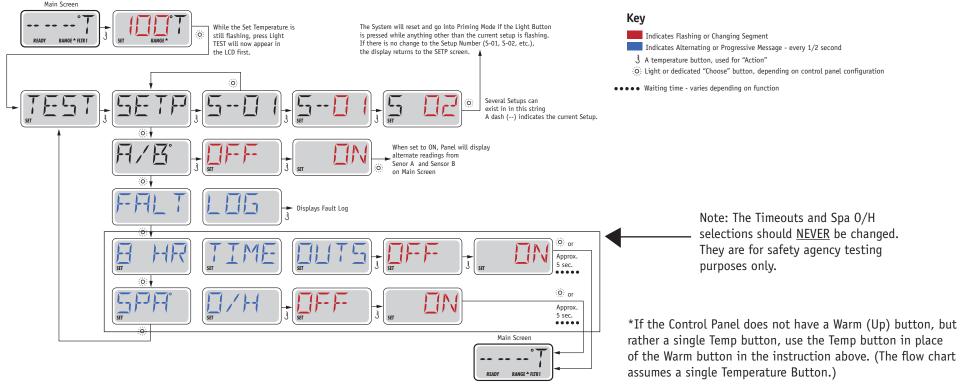

Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending.

Template 56377 10-05-12



Equipment Expansion

Expansion Features		
Control Connection	Default	Fuse
Relay 1 (J101)	Undefined	None
Relay 7/8 (J107)	See Below	30A
	•	(only) In Setups 2, 4, 6, 8, 10, 12, 14, 16 And 1-Speed Blower (With Splitter & In-Line Fuse) In Setups 1, 3, 5, 7, 9, 11, 13, 15
Relay 9/10 (J108)	Undefined	None



12

DIP Switch Functions

Fixed-fuction DIP Switches

A1 Test Mode (normally Off).

A2 In "ON" position, add one high-speed pump (or blower) with Heater.

A3 In "ON" position, add two high-speed pumps (or 1 HS Pump and Blower) with Heater.

A4 In "ON" position, add four high-speed pumps (or 3 HS Pumps and Blower) with Heater.

A5 In "ON" position, enables Special Amperage Rule B. See Special Features section under Configuration Options for functionality with your system.

In "OFF" position, enables Special Amperage Rule A.

A6 Persistent memory reset (Used when the spa is powering up to restore factory settings as determined by software configuration).

A2, A3, and A4 work in combination to determine the number of high-speed devices and blowers that can run before the heat is disabled. i.e. A2 and A3 in the ON position and A4 in the OFF position will allow the heater to operate with up to 3 high-speed pumps (or two HS Pumps and Blower) running at the same time. Heat is disabled when the fourth high-speed pump or blower is turned on.

Note: A2/A3/A4 all off = No heat with any high-speed pump or blower.

Assignable DIP Switches

A7 In "ON" position, enables a 5-minute cooldown for some gas heaters (Cooling Time B).

In "OFF" position, enables a 1-minute cooldown for electric heaters (Cooling Time A).

Undesignated switches are not assigned a function.



Jumper Definitions

J109	Non Applicable on CE models	J109 2
J91	Real Time Clock Enable/Disable Note: This Jumper should NOT be shorted when the Control Panel can display time of day.	J91 🔯
J30	Do Not Use	
J31	Jumper on 1 pin with 2.0kW or smaller heater Jumper on 2 pins with a 3.0kW or higher heater	J31 🚰
J29	Heater Disable Switch Connection. If J29 is shorted by any means, the heater will not run until J29 is no longer shorted. If J29 is shorted during power-up "J29" will appear on the panel. The message can be dismissed with a button press, and is the only control panel notification of J29 being shorted. No message is displayed if J29 is shorted after power-up, but the heater will not run until J29 is no longer shorted.	J29 💍
	J29 expects a switch closure (not a voltage) as the command signal. In some areas, a local power company may offer discounts based on voluntary "power shedding" devices that may be installed	in conjunction with the spa.
J25, J26, J27	Heater Type Settings. Note: Factory Configured do not change.	J27 J25 [J J26
J24	Jumper on center two pins (230V) when heater is running at 240V. Two Jumpers installed; one on left 2 pins and one on right 2 pins (115V) when heater is running at 120V.	230V J24 0 0 0 115 15V

Warning!

Template 56377 10-05-12

Setting DIP switches or jumpers incorrectly may cause abnormal system behavior and/or damage to system components. Refer to Switchbank illustration on Wiring Configuration page for correct settings for this system. Contact Balboa if you require additional configuration pages added to this tech sheet.



Replacement Parts

PCBA:

Main PCBA: 59201-01 Expander PCBA: 59097

HEATER(s):

Plug + Click Heater Kit: 58107R16 3.0kW 825kW

55626R16 3.0kW Titanium

Temp Sensor Kit: 53605

CABLES: N/A

FUSES:

Part Number	Amperage*	Location
30136	30A	F6, F8, F1 (Expander)
26307	2A	F4
24825	0.125A	F3
26904	10A	F2, F7
26976	3.15A	F5

^{*} The amperages shown above are only intended for identifying fuses on our boards. They are not complete descriptions of those fuses. Please use the part numbers at the left to order fuses directly from Balboa.



Dofault

5 Seconds

General Features

reature	Detault
Pump 1 in Filter Cycle (Circ Only)	No
Pump 1 Low Timer	15 Minutes
General Pump Timer	15 Minutes
Blower Timer	15 Minutes
MicroSilk® Timer	30 Minutes
Mister Timer	15 Minutes
Light Timer	240 Minutes
Circ (when enabled)	Programmable + Polling
Cleanup Cycle	30 Minutes
Cleanup as Preference setting	Yes
Ozone	With Heater Pump*
Ozone Suppression	OFF
Pump Purge	60 Seconds
Blower/MicroSilk® Purge	30 Seconds



Serial - Pumps at lowest speed

Mister Purge

Purge Type

^{*} The heater Pump can be either a Circ Pump or Pump 1 Low.

°C

Temperature Features

Feature Default

Temperature Display

All temperatures must be specified in °F. The system converts °F to °C dynamically. If Celsius is required for default settings, choose a desired °C value that (after rounding) corresponds to a Fahrenheit value.

°C	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
°F	39	41	43	45	46	48	50	52	54	55	<i>57</i>	59	61	63	64	66	68	70	72
°C	23	24	25	26	27	28	29	30	31	<i>32</i>	33	34	<i>35</i>	36	<i>37</i>	38	39	40	
°F	73	<i>75</i>	77	79	81	82	84	86	88	90	91	93	95	97	99	100	102	104	

Hi-Range Min. Set Temp	80°F
Hi-Range Max. Set Temp	104°
Hi-Range Default Temp*	100°
Lo-Range Min. Set Temp	50°F
Lo-Range Max. Set Temp	99°F
Lo-Range Default Temp*	70°F
Freeze Threshold	44°F

Freeze Type Rotating - Pumps at Lowest Speed

Temp Lock Type Temp + Settings



^{*}May be changed by end-user (if enabled)

Time Features

Feature	Default
Time Format*	24 Hour
Filter 1 Start Hour*	20:00 (8:00 PM)
Filter 1 Duration*	2 Hours
Filter Cycle 2 Default*	OFF
Filter 2 Start Hour*	08:00 (8:00 AM)
Filter 2 Duration*	15 Minutes
Light Cycle	Disabled
	OFF
Light Cycle Default*	
Light Cycle Start Hour*	21:00 (9:00 PM)
Light Cycle Duration*	15 Minutes
Cooling Time A	1 Minute
Cooling Time B	5 Minutes



^{*}May be changed by end-user (if enabled)

Reminder Features

Feature	Default
Reminders Shown*	Yes
Check pH	<i>OFF</i>
Check Sanitizer	<i>OFF</i>
Clean Filter	30 Days
Test GFCI	65 Days
Drain Water	100 Days
Change Cartridge	OFF
Clean Cover	<i>OFF</i>
Treat Wood	<i>OFF</i>
Change Filter	365 Days

BALB@A
water group

^{*}May be changed by end-user (if enabled)

Special Features

Feature Default

Special Amperage Rule A No Limitation

Special Amperage Rule B Blower and MicroSilk® turn off when all pumps are on high speed

Drain Mode Disabled
Demo Mode Disabled

GFCI Trip Not Applicable for CE Models

Ozone Slaved to Heater Pump Yes in circ setups

No in non-circ setups

Dual Voltage Heater Always Input Voltage

Safety Suction Disabled

TP400 Panel Configuration

Button Layout Table for TP400T

Button #	Setup 1
1	Temperature
2	Jets 1
3	Light 1
4	MicroSilk®
LED 1	Heater ON
LED 2	Jets 1 ON
LED 3	Light ON
LED 4	MicroSilk®

TP400T CE 50332-XX ▶

Includes Overlay PN 12741



The TP400T is mainly suitable for Setups 8, 10 & 16. In other Setups an AX10 A2 for Jets 2 and/or an AX10 A3 for Blower will be required.

MicroSilk® is a registered trademark of Jason International



TP600 Panel Configuration

Button Layout Table

Button #	Pump 2 Setups 1 - 6,	No Pump 2, Blower	No Pump 2, No Blower	
	11 - 14	Setups 7, 9, 15	Setups 8, 10, 16	
1	Jets 1	Jets 1	Jets 1	
2	Jets 2	Blower	Unused	
3	MicroSilk®	MicroSilk®	MicroSilk®	
4	Up	Up	Up	
5	Light 1	Light 1	Light 1	
6	Down	Down	Down	
LED 1	Jets 1	Jets 1	Jets 1	
LED 2	Jets 2	Blower Unus		
LED 3	Light 1	Light 1	Light 1	
LED 4	Heat On	Heat On	Heat On	

^{*} When using setups in column 1, which operate both a Pump 2 AND a Blower, Pump 2 is on the main panel (Button2) and Blower must be operated with an Auxilliary Panel - AX10A3 on Bank 1 (J5).

See Page 21.



TP600

Panel 50439-XX - Includes Overlay 13142 - can be used with all Setups.





TP800 Panel Configuration


Button Layout Table


Template 56377 10-05-12


Feature #	Pump 2, Blower & Circ	NO Pump 2, Blower & Circ	Pump 2, NO Blower & Circ	NO Pump 2, NO Blower & Circ	Pump 2, Blower & NO Circ	NO Pump 2, Blower & NO Circ	Pump 3, NO Bl & NO Circ	NO Pump 2, NO Bl & NO Circ
	Setups 1, 3, 5	Setups 7, 9	Setups 3, 4, 6	Setups 8, 10	Setups 11, 13	Setup 15	Setups 12, 14	Setup 16
A1	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
A2	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1
А3	Jets 2	Blower	Jets 2	MicroSilk®	Jets 2	Blower	Jets 2	MicroSilk®
A4	Blower	MicroSilk®	MicroSilk®	Light 1	Blower	MicroSilk®	MicroSilk®	Light 1
A 5	MicroSilk®	Light 1	Light 1	Invert	MicroSilk®	Light 1	Light 1	Invert
A6	Light 1	Invert	Invert	(Circ Icon)	Light 1	Invert	Invert	Undefined
A7	Invert	(Circ Icon)	(Circ Icon)	Undefined	Invert	Undefined	Undefined	Undefined
A8	(Circ Icon)	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
А9	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A10	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
A11	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
A12	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
A13	Jets 1	Undefined	Undefined	Undefined	Jets 1	Undefined	Undefined	Undefined
A14	Jets 2	Undefined	Undefined	Undefined	Jets 2	Undefined	Undefined	Undefined
A15	Blower	Undefined	Undefined	Undefined	Blower	Undefined	Undefined	Undefined
A16	Light	Undefined	Undefined	Undefined	Light	Undefined	Undefined	Undefined
B1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1
В2	Jets 2	Blower	Jets 2	Undefined	Jets 2	Blower	Jets 2	Undefined
В3	MicroSilk®	MicroSilk®	MicroSilk®	MicroSilk®	MicroSilk®	MicroSilk®	MicroSilk®	MicroSilk®
B4	Light 1	Light 1	Light 1	Light 1	Light 1	Light 1	Light 1	Light 1




Spa Screen

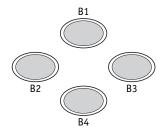


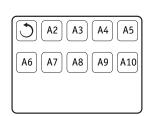


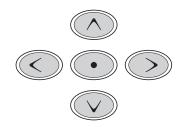

Shortcuts Screen

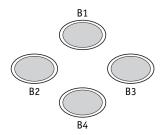

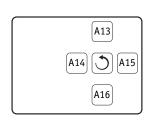

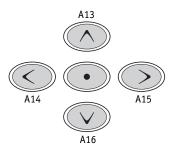

Note: Buttons 11 and 12 are not used in this configuration. Button 1 is fixed.

A Circ Icon will appear when a Circ Pump is configured.



TP800 Panel Configuration

TP800

Panel 50438-XX - Includes Overlay 13141 - can be used with all Setups.



Panel 50318-XX - Includes Overlay 12719 - can be used with Setups 1-6 and 11-14.





TP900 Panel Configuration

Button Layout Table


Button #	Pump 2, Blower & Circ	NO Pump 2, Blower & Circ	Pump 2, NO Blower & Circ	NO Pump 2, NO Blower & Circ	Pump 2, Blower & NO Circ	NO Pump 2, Blower & NO Circ	Pump 3, NO Bl & NO Circ	NO Pump 2, NO Bl & NO Circ
	Setups 1, 3, 5	Setups 7, 9	Setups 3, 4, 6	Setups 8, 10	Setups 11, 13	Setup 15	Setups 12, 14	Setup 16
1	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
2	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1
3	Jets 2	Blower	Jets 2	MicroSilk®	Jets 2	Blower	Jets 2	MicroSilk®
4	Blower	MicroSilk®	MicroSilk®	Light 1	Blower	MicroSilk®	MicroSilk®	Light 1
5	MicroSilk®	Light 1	Light 1	Invert	MicroSilk®	Light 1	Light 1	Invert
6	Light 1	Invert	Invert	(Circ Icon)	Light 1	Invert	Invert	Undefined
7	Invert	(Circ Icon)	(Circ Icon)	Undefined	Invert	Undefined	Undefined	Undefined
8	(Circ Icon)	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
9	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
10	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined	Undefined
11	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
12	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
13	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1	Jets 1
14	Jets 2	Blower	Jets 2	MicroSilk®	Jets 2	Blower	Jets 2	MicroSilk®
15	MicroSilk®	MicroSilk®	MicroSilk®	Light	MicroSilk®	MicroSilk®	MicroSilk®	Light
16	Light	Light	Light	Invert	Light	Light	Light	Invert

A Circ Icon will appear when a Circ Pump is configured.



26

TP900 Panel Configuration

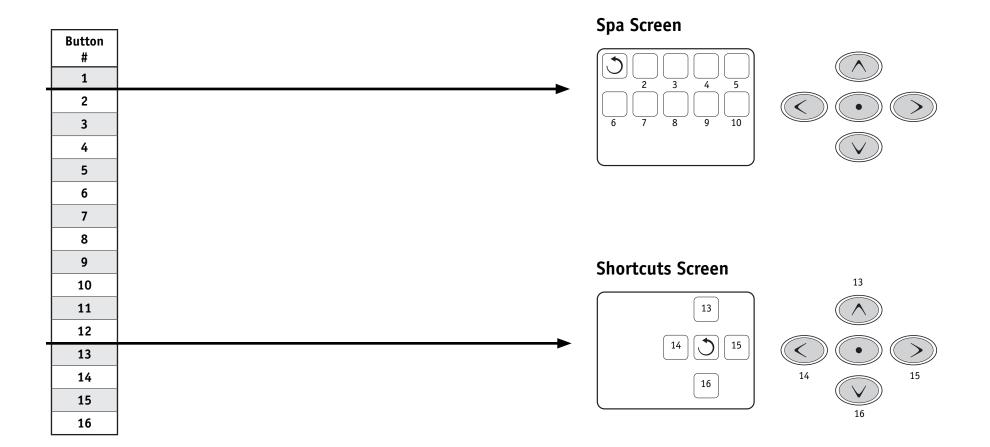

56630-04_56631-04_97_A 05-23-23

Template 56377 10-05-12

27

Auxiliary Panel Features on Bank 1*

Feature	Default
Aux Button A1	Jets 1
Aux Button A2	Jets 2
Aux Button A3	Blower
Aux Button A4	Light

Auxiliary Panel Features on Bank 2*

Feature	Default
Aux Button A5	Jets 1
Aux Button A6	Jets 2
Aux Button A7	MicroSilk®
Aux Button A8	Light

*Bank 1 consists of J5 on the Main Circuit Board. Bank 2 consists of J8 on the Main Circuit Board.

Aux Connection Splitter PN 25257 may be required.

Buttons that are assigned to equipment that is not defined in a Setup will not do anything in that Setup.



Auxiliary Panel Features

AX10 Panels on Bank 1*

A1, AX10A1 No 0/L 52803
A2, AX10A2 No 0/L 52804
A3, AX10A3 No 0/L 52805 ►
A4, AX10A4 No 0/L 52806



Call Customer Service for additional information about Auxiliary Panels.

AX10 Panels on Bank 2*

A5, AX10A1	No O/L	52803
A6, AX10A2	No O/L	52804
A7, AX10A3	No O/L	52805
A8 AX10A4	No O/I	52806


*Bank 1 consists of J5 on the Main Circuit Board.

Bank 2 consists of J8 on the Main Circuit Board.

Aux Connection Splitter PN 25257 may be required.

AX20


AX20 A1A2 No 0/L 52800 AX20 A1A3 No 0/L 52801 AX20 A1A4 No 0/L 52802

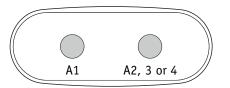

AX20 Auxiliary Panel plugged into Bank 1 will operate A1 + A2, A3 or A4. AX20 Auxiliary Panel plugged into Bank 2 will operate A5 + A6, A7 or A8.

AX40

AX40 No 0/L 52799

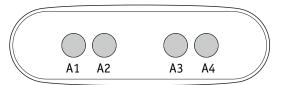


AX40 Auxiliary Panel plugged into Bank 1 will operate A1 + A2, A3 and A4. AX40 Auxiliary Panel plugged into Bank 2 will operate A5 + A6, A7 and A8.



Remote Panel Features

Feature	Default
Remote Button A1	Jets 1
Remote Button A2	Jets 2
Remote Button A3	Undefined
Remote Button A4	Blower
Remote Button A5	Light
Remote Button A6	Undefined
Remote Button A7	Undefined
Remote Button A8	Undefined

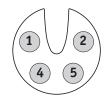

Buttons that are assigned to equipment that is not defined in a Setup will not do anything in that Setup.

Remote Panel Part Number

Overlay Part Number