

VS300FL4 Tech Sheet

Balboa Water Group System PN 54626-02

System Model # VSP-VS300FL4-CCAJ

Software Version # 41

EPN # 5427

Base PCBA - PN 54604-02

Base Panels

VL401 (LCD Lite Duplex) – PN 54665

VL403 (LED Lite Duplex) – PN 54664

VL406U – PN 55350

Optional Base Panels

VL200 (Mini) – PN 55123

VL240 (MVP240) – PN 55080

VL260 (MVP260) – PN 55081

System Revision History

System PN	EPN	Date	Requested By	Changes Made
54626	1710	02.14.2007	Balboa	New system
54626-01	2668	11.21.2007	Balboa	Software update to v41, model now VS300FL4
54626-02	5427	07.08.2020	BWG	Install 120V heater jumper.

Basic System Features and Functions

Power Requirements

- 120/240VAC, 60Hz, 16/32A, Class A GFCI-protected service (Circuit Breaker rating = 20/40A max.)
- 3 wires [hot, neutral, ground]/4 wires [hot, hot, neutral, ground]

System Outputs

Setup 1 (As Manufactured)

- 120V Pump 1, 2-Speed
- 120V Ozone *
- 12V Spa Light
- 120V 1.0kW Heater (4.0kW@240V)**
- VL401, VL403, or VL406U Panel (DIP switch A3 must be OFF)

Optional Panels

- VL200, VL240, or VL260 Panel (DIP switch A3 must be ON)

Note: If using 120V GFCI cord, service is limited to 12A.

* Ozone runs with P1-low and must be same voltage as Pump 1.

** Heater wattage is rated at 240V. When running 120V to heater, output is approximately 25%.

Basic System Features and Functions

Any time you change a DIP Switch, other than A1, you must reset Persistent Memory for your new DIP Switch Settings changes to take effect. If you do not reset Persistent Memory, your system may function improperly.

To reset Persistent Memory:

- Power down by disconnecting power source from spa.
- Put a jumper across J43, covering both pins. (See illustration below)
- Power up by connecting power source to spa.
- Wait until “P” is displayed on your panel.
- Power down again.
- Remove jumper from J43 (May also move to cover 1 pin only)
- Power up again.

About Persistent Memory and Time of Day Retention:

This system uses memory that doesn't require a battery to store a variety of settings. What we refer to as Persistent Memory stores the filter settings, the set temperature, and the heat mode.


Persistent Memory is not used for Time of Day. Only models with a Serial Deluxe panel installed (VS5xxDZ and GS5xxDZ) can display the time. However, during power loss to the spa, the system will lose the correct time, and reset to 12:00 PM when power is restored.

Power Up Display Sequence

Upon power up, you should see the following on the display:

- Three numbers in a row, which are the SSID (the System Software ID). The third display of these numbers is the Software Version, which should match the version of your system. For example, if these three numbers are 100 67 38, that is a VS511SZ at version 38.
- Displayed next is: “24” (indicating the system is configured for a heater between 3 and 6 kW) or “12” (indicating the system is configured for a heater effectively* between 1 and 3 kW). “24” should appear for all VS models running at 240VAC. “12” should appear for all VS models running at 120VAC, as well as all GS models. (*A heater which is rated at 4 kW at 240VAC will function as a 1 kW heater at 120VAC.)
- “P” will appear to signal the start of Priming Mode.

At this point, the power up sequence is complete. Refer to the Reference Card for the VS or GS System model of your spa for information about how the spa operates from this point on, including how to adjust the Time of Day if using a Serial Deluxe style panel.

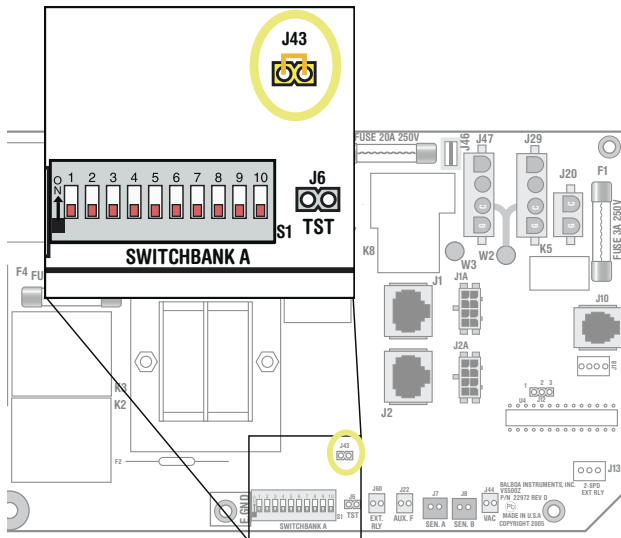


J43 on VS5xxZ and VS300 Series Main Board Shown.

Wiring Configuration and DIP Settings

Setup 1 (As Manufactured)

- 120V Pump 1, 2-Speed
- 12V Spa Light
- 120V Ozone
- 120V 1.0kW Heater (4.0kw@240V)
- VL401, VL403, or VL406U Main Panel

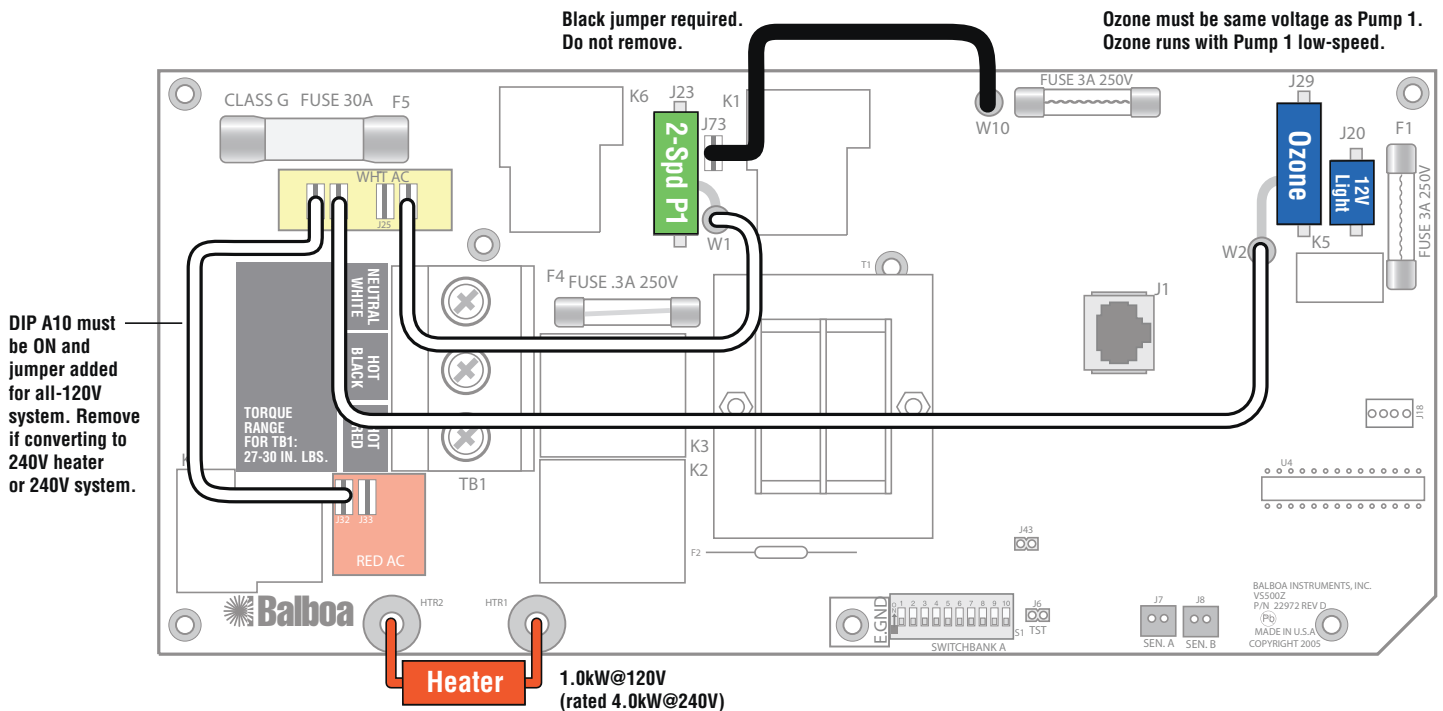

WARNING: Main Power to system should be turned OFF BEFORE adjusting DIP switches.
WARNING: Persistent Memory (J43) must be RESET to allow new DIP switch settings to take effect. (See Persistent Memory page)

SSID #

100
59
41

Switchbank A

A1, Test Mode OFF **A6, 60 Hz**
A2, P1, LT, TD, TU **A7, Mode changes allowed**
A3, Duplex Panel **A8, Degrees F**
A4, N/A (must be OFF) **A9, P1-low timeout, Table 1**
A5, P1-high timeout, Table 1 **A10, Low Amp mode**

J43 Memory Reset

Panel Button Assignments

1=Pump 1 3=Temp Down
2=Light 4=Temp Up

Panel Button Positions

Wiring Color Key

- 120 Volt Connections
- 240 Volt Connections
- Black AC Jumpers
- 12 Volt Connections
- Relay Control Wires

Board Connector Key

1 Typically Line voltage
2 Typically Line voltage for 2-speed pumps
3 Neutral (Common)
4 Ground

Note flat sides in connector

DIP Switches and Jumpers Definitions

SSID 100 59 41

Base Model VS300F

DIP Switch Key




- A1 Test Mode (normally OFF)
- A2 "ON" position: Button layout will be: Pump 1, Light, Temp Down, Temp Up *
"OFF" position: Button layout will be: Unused, Pump 1, Temp, Light
- A3 "ON" position: use Mini Panel * 
"OFF" position: use Lite Duplex or Digital Duplex panel  
- A4 N/A (must be OFF)
- A5 Pump 1 high-speed timeout, see Table 1
- A6 "ON" position: 50Hz operation
"OFF" position: 60Hz operation
- A7 "ON" position: Standard mode only
"OFF" position: Std/Ecn/Sleep mode changes allowed
- A8 "ON" position: temperature is displayed in degrees Celsius
"OFF" position: temperature is displayed in degrees Fahrenheit
- A9 Pump 1 low-speed timeout, see Table 1
- A10 "ON" position: heater is disabled while the high-speed pump is running (low amperage mode)
"OFF" position: heater can run while the high-speed pump is running (high amperage mode)

Table 1		Pump 1 Timeouts	
A5	A9	Low-spd	Hi-spd
OFF	OFF	2 hours	15 min
ON	OFF	2 hours	30 min
OFF	ON	15 min	15 min
ON	ON	30 min	30 min


* Panels with button layout  are not compatible when A2 or A3 is ON.
Note: No blower or second pump available.

Jumper Key

- J43 When jumper is placed on 2 pins during power-up, system will reset persistent memory.
Leave on 1 pin only to enable persistent memory feature.

WARNING:

- Setting DIP switches incorrectly may cause abnormal system behavior and/or damage to system components.
- Refer to Switchbank illustration on Wiring Configuration page for correct settings for this system.
- Contact Balboa if you require additional configuration pages added to this hot sheet.

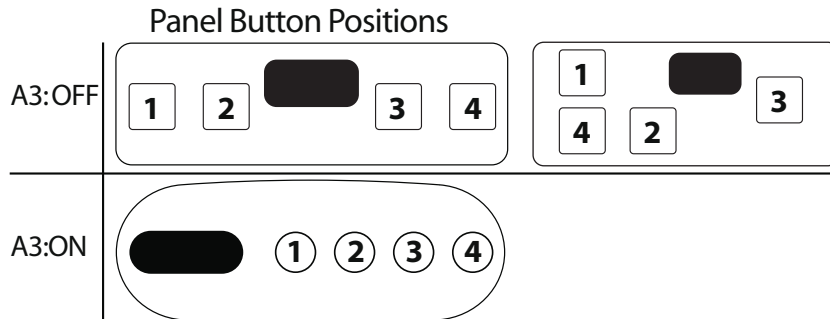

Panel Button Assignments

A2:OFF	1=Unused 2=Pump 1	3=Temp 4=Light
A2:ON	1=Pump 1 2=Light	3=Temp Down 4=Temp Up

Duplex Panel Configurations

SETUP (AS MANUFACTURED)



VL406U
 PN 55350 with Overlay PN 11947
 • Connects to Main Board terminal J1
 • Cannot convert to VL406T by changing overlay




VL401 (Lite Digital)
 PN 54665 with Overlay PN 11885
 • Connects to Main Panel terminal J1



VL403 (Lite Digital)
 PN 54664 with Overlay PN 11884
 • Connects to Main Panel terminal J1

Switchbank A

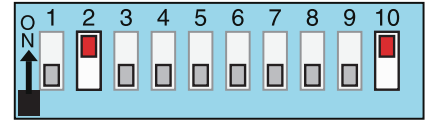


DIP switch A3 must be OFF

OPTIONAL PANELS



VL260 (MVP260)
 PN 55081 with Overlay PN 11746
 • Connects to Main Panel terminal J1

Switchbank A

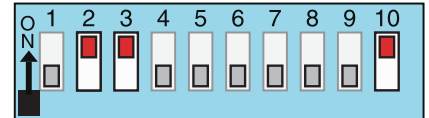

DIP switch A3 must be ON



VL240 (MVP240)
 PN 55080 with Overlay PN 11745
 • Connects to Main Panel terminal J1



VL200 (Mini Panel)
 PN 55123 with Overlay PN 11852
 • Connects to Main Panel terminal J1